


FIG. 1

FIG. 2

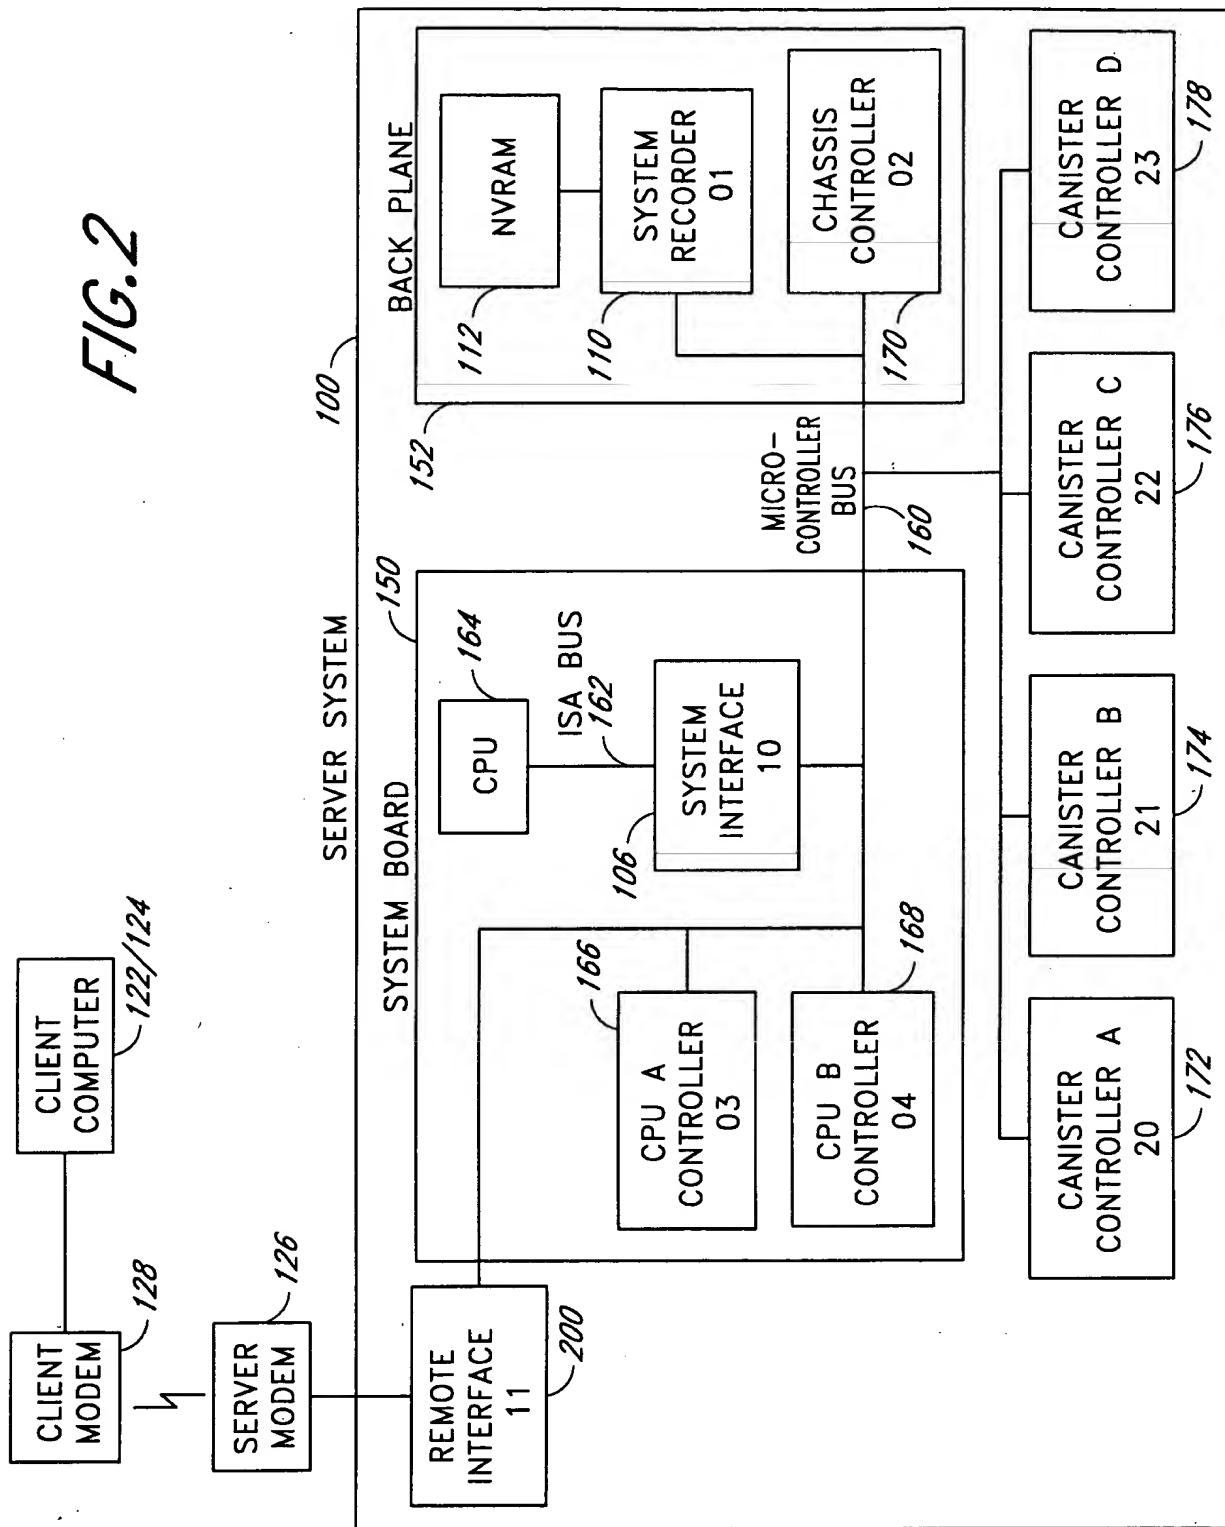

REMOTE INTERFACE SERIAL PROTOCOL MESSAGE FORMATS

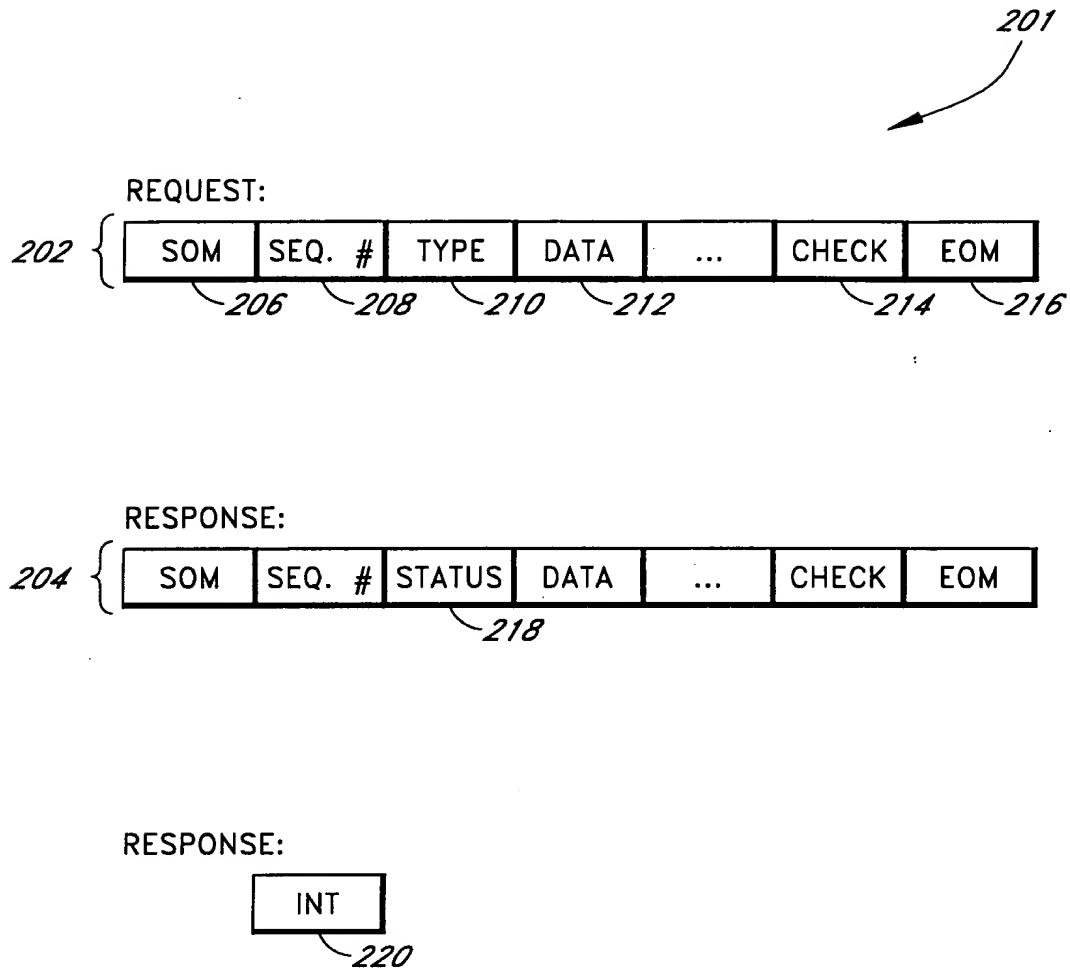


FIG. 3

POWER-ON PROCESS

FIG. 4A

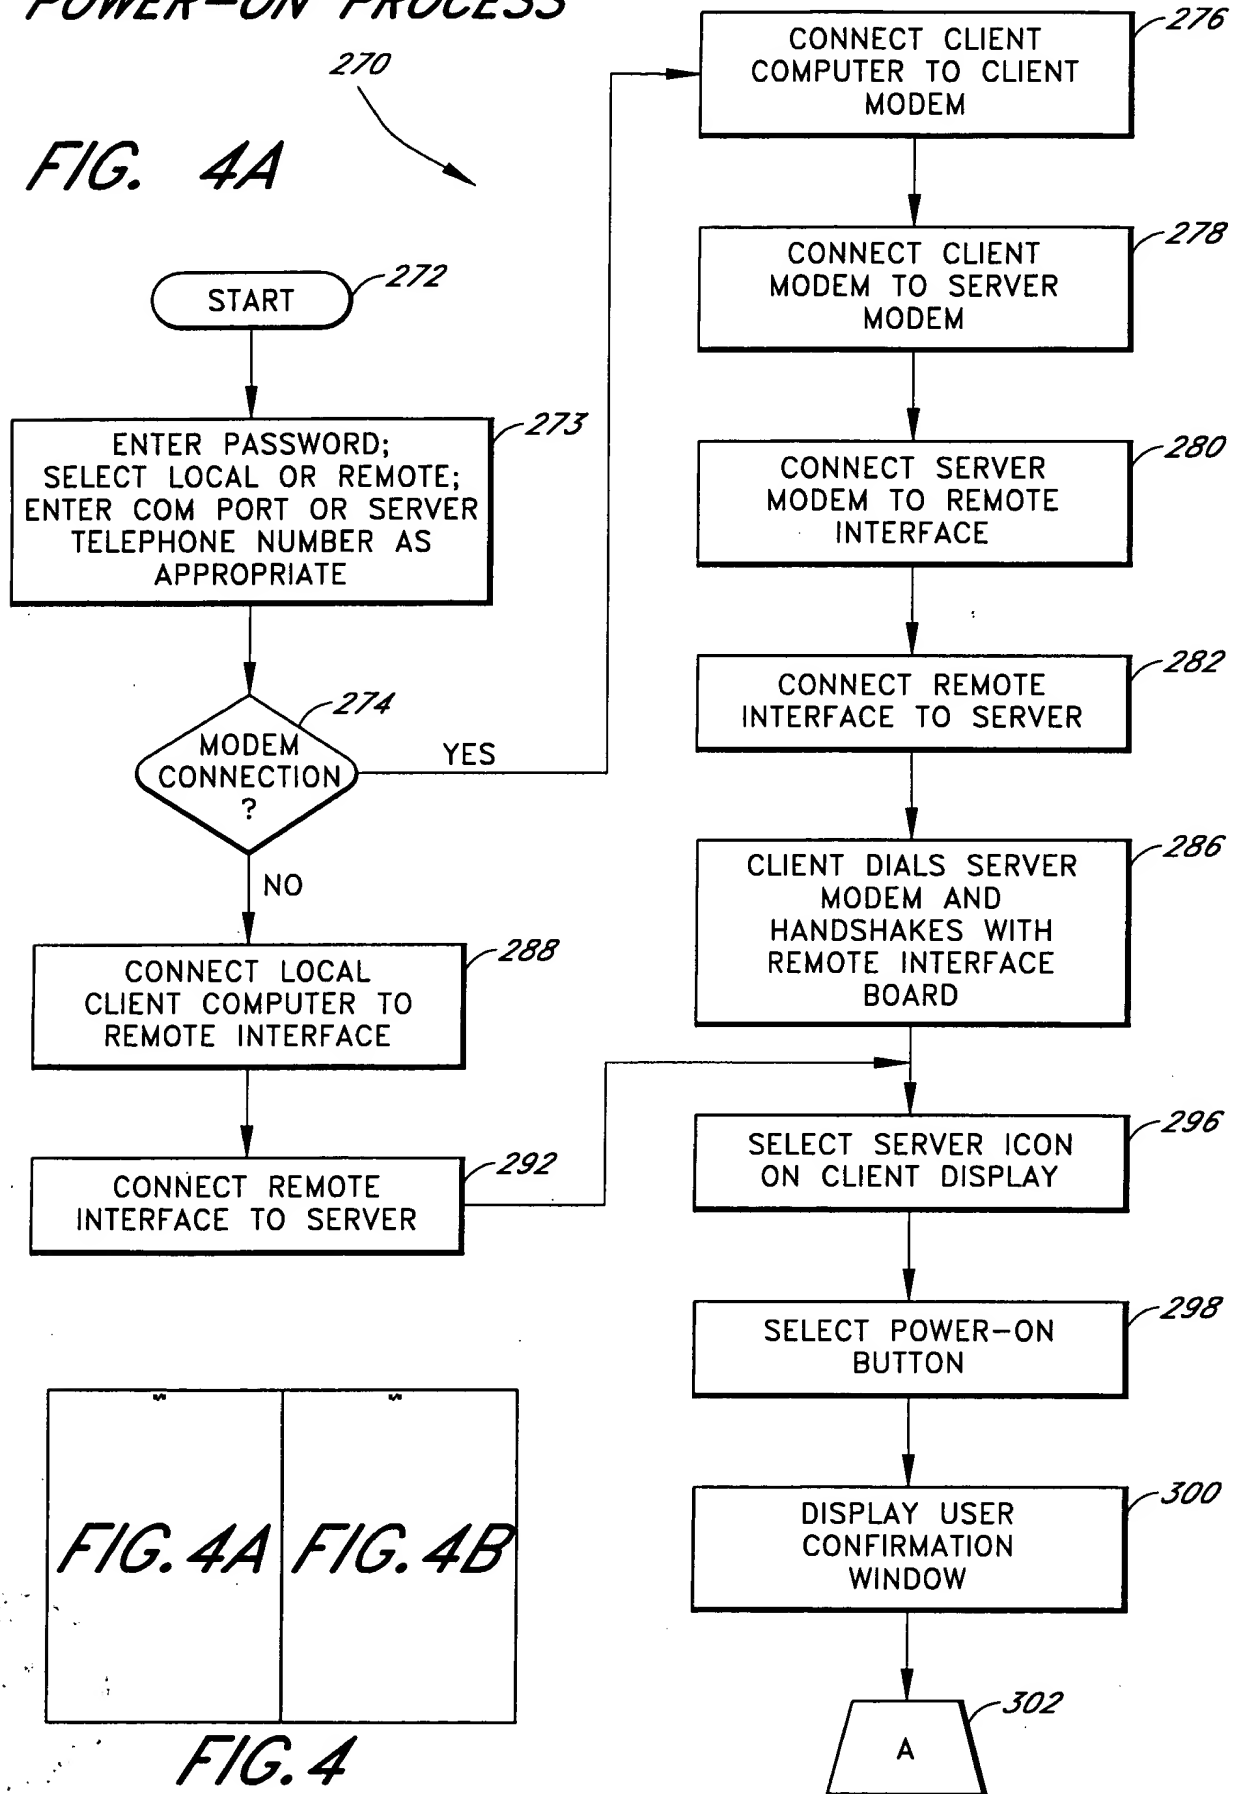


FIG. 4A FIG. 4B

FIG. 4

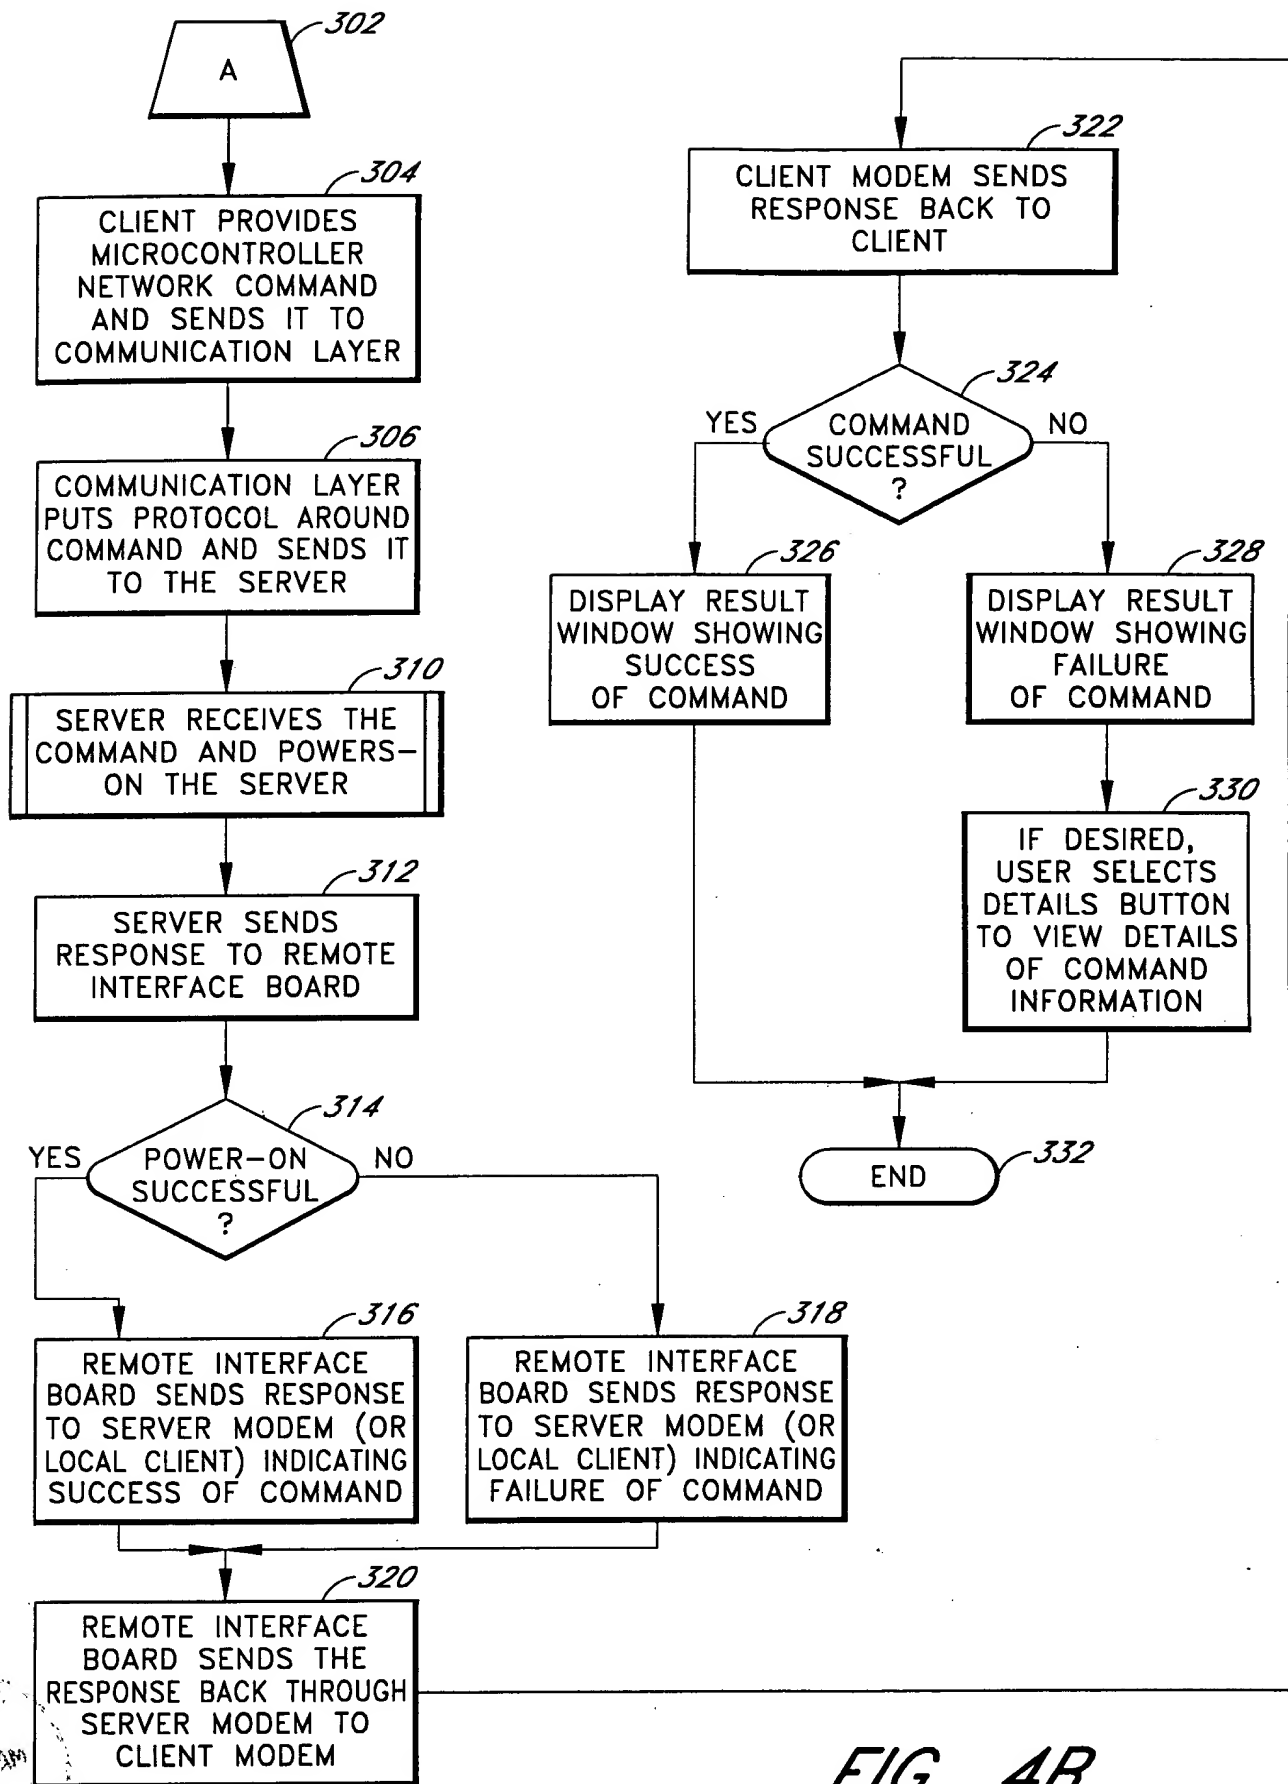


FIG. 4B

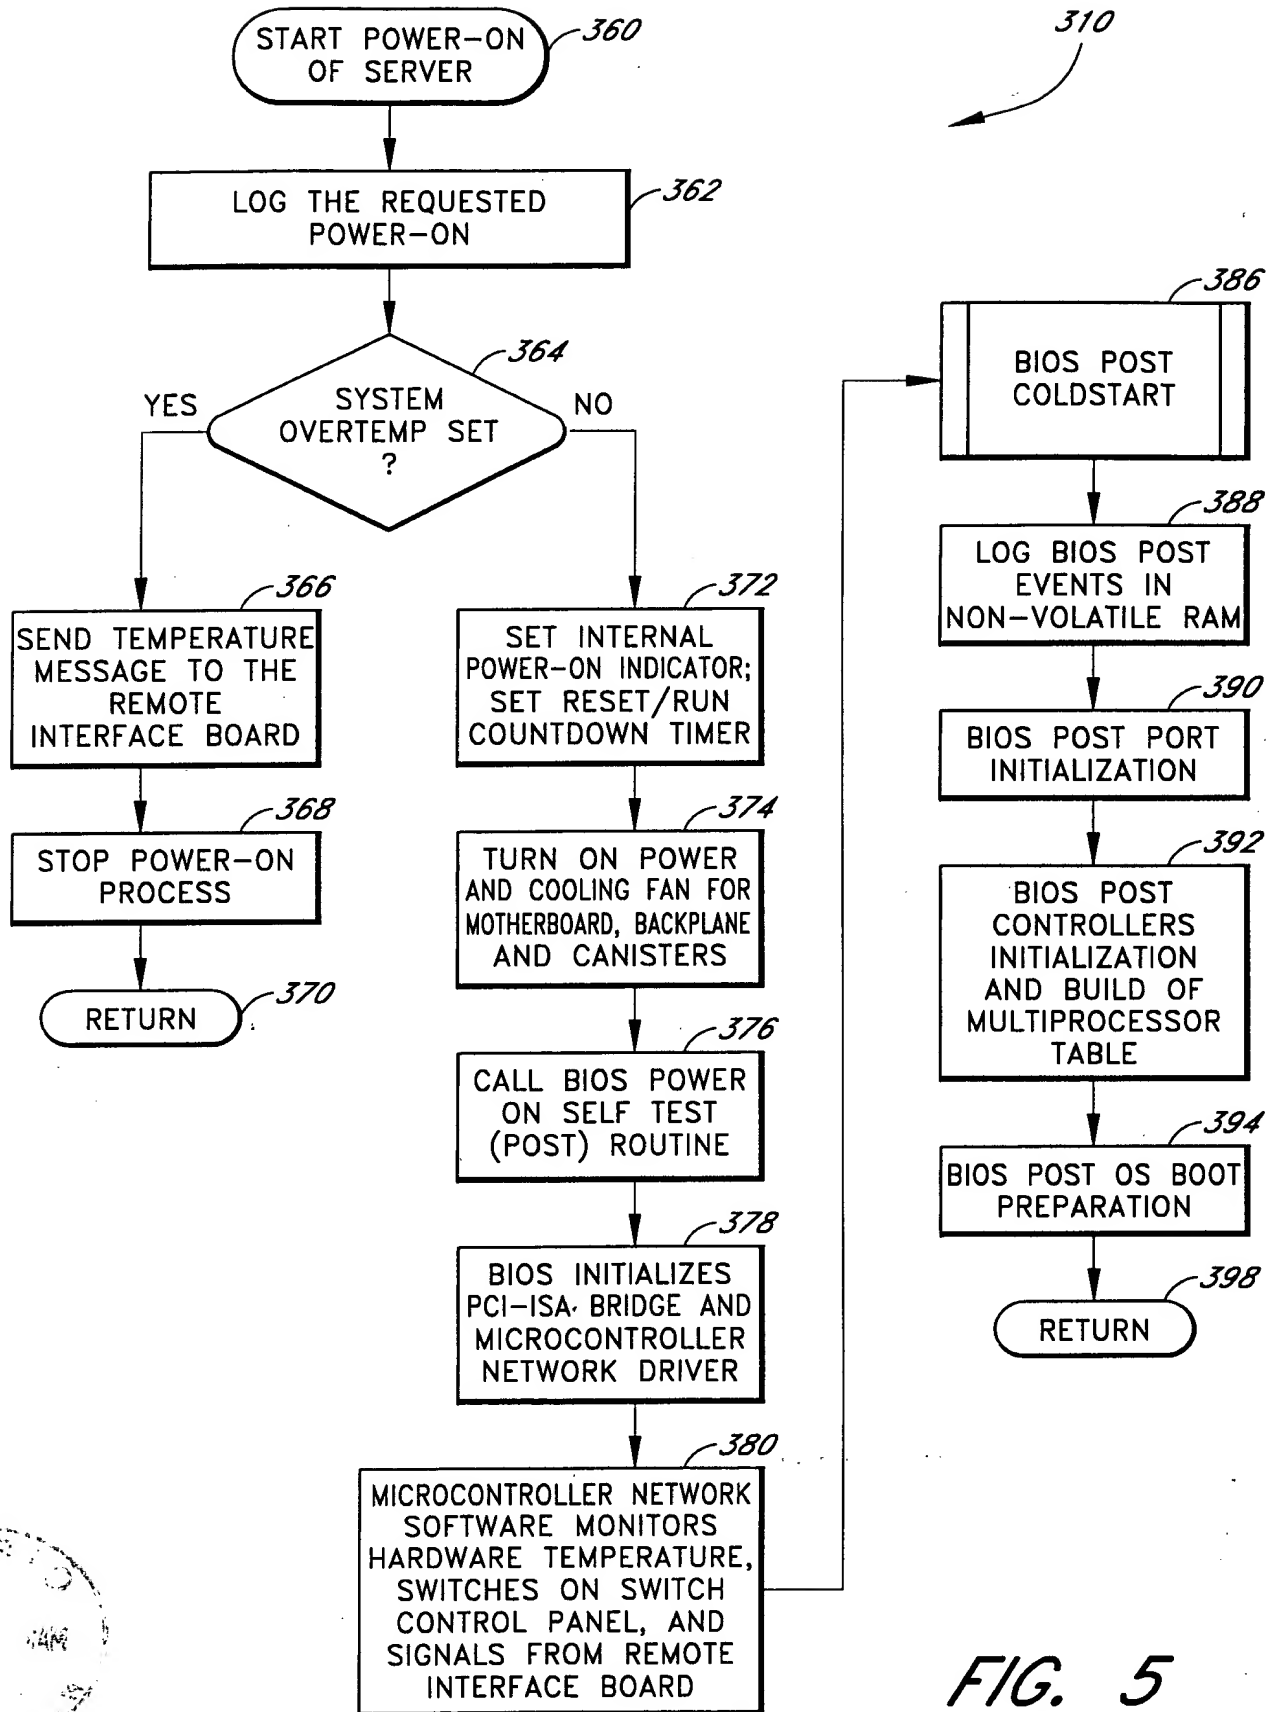
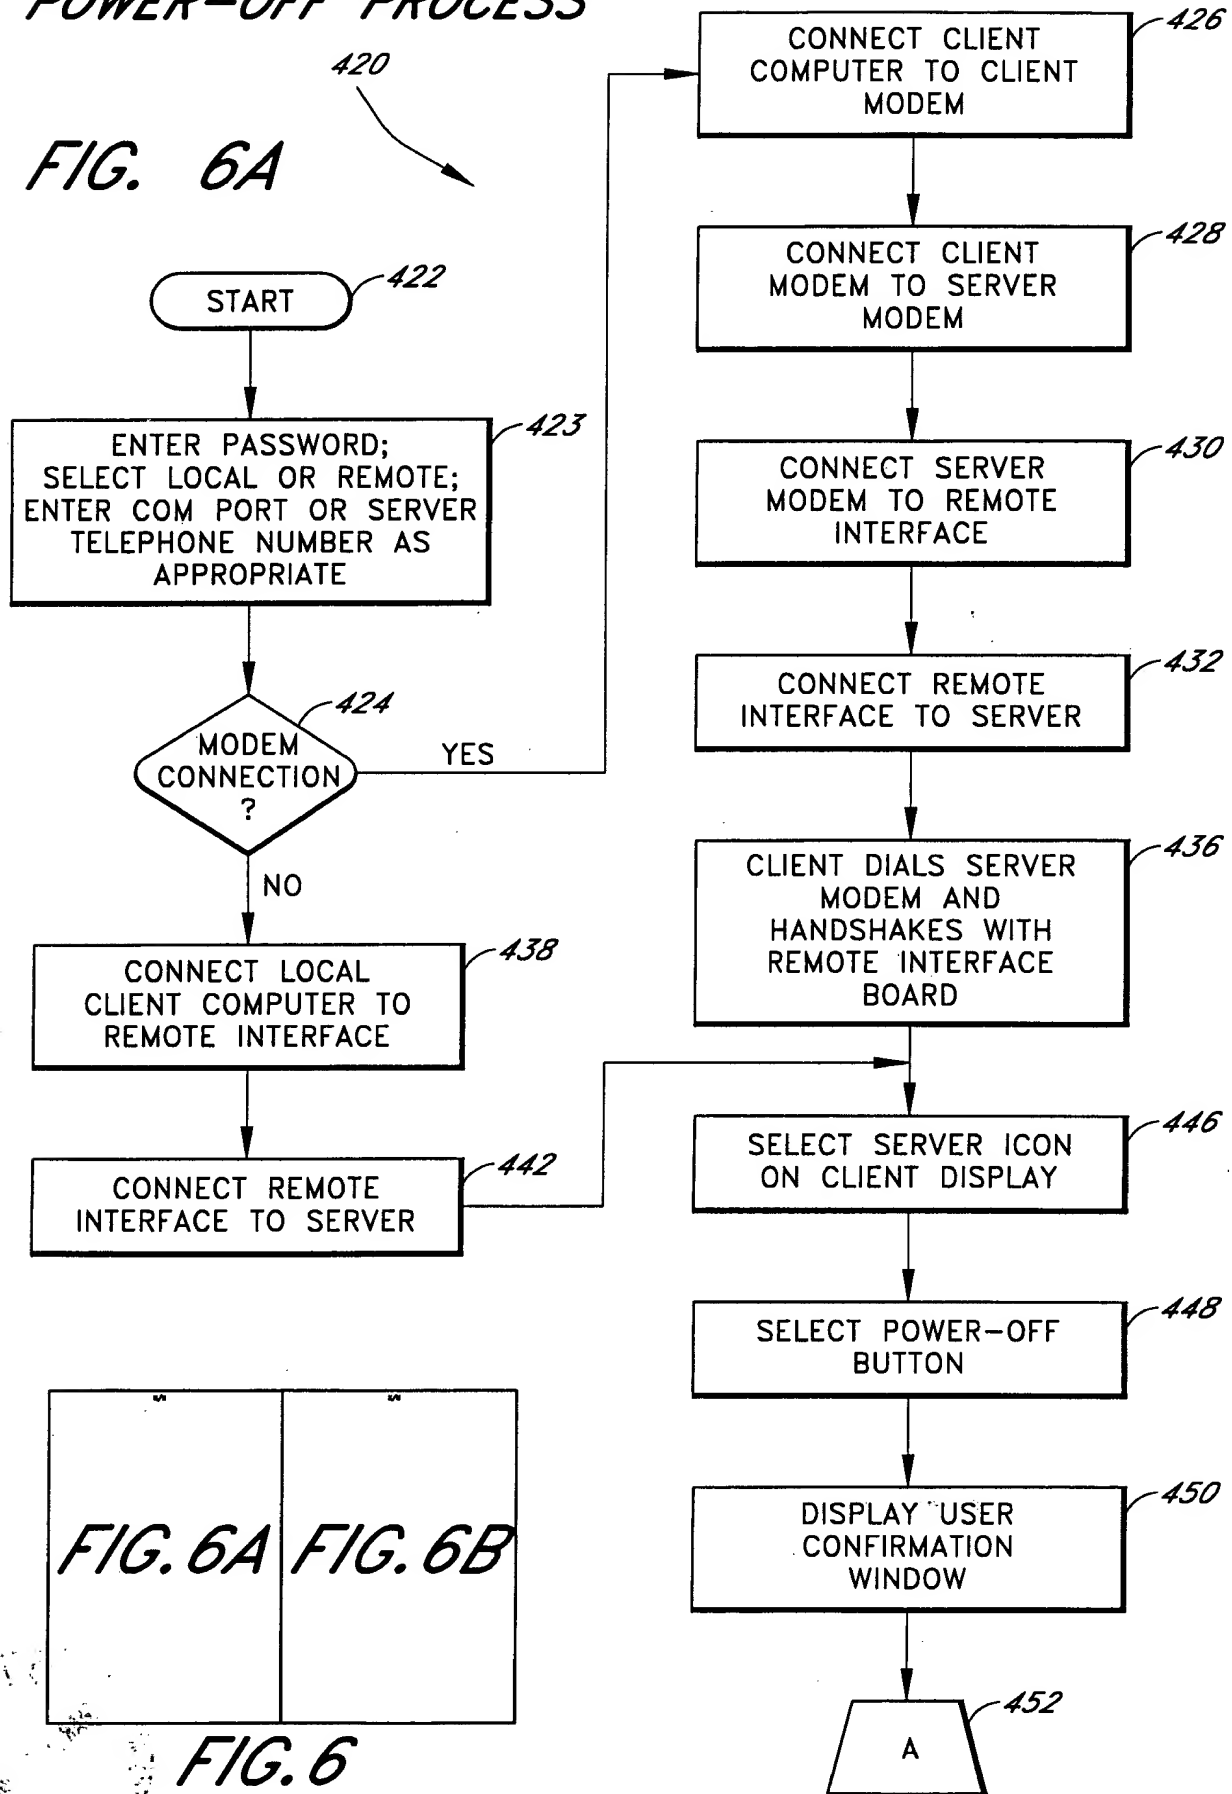


FIG. 5

POWER-OFF PROCESS

FIG. 6A



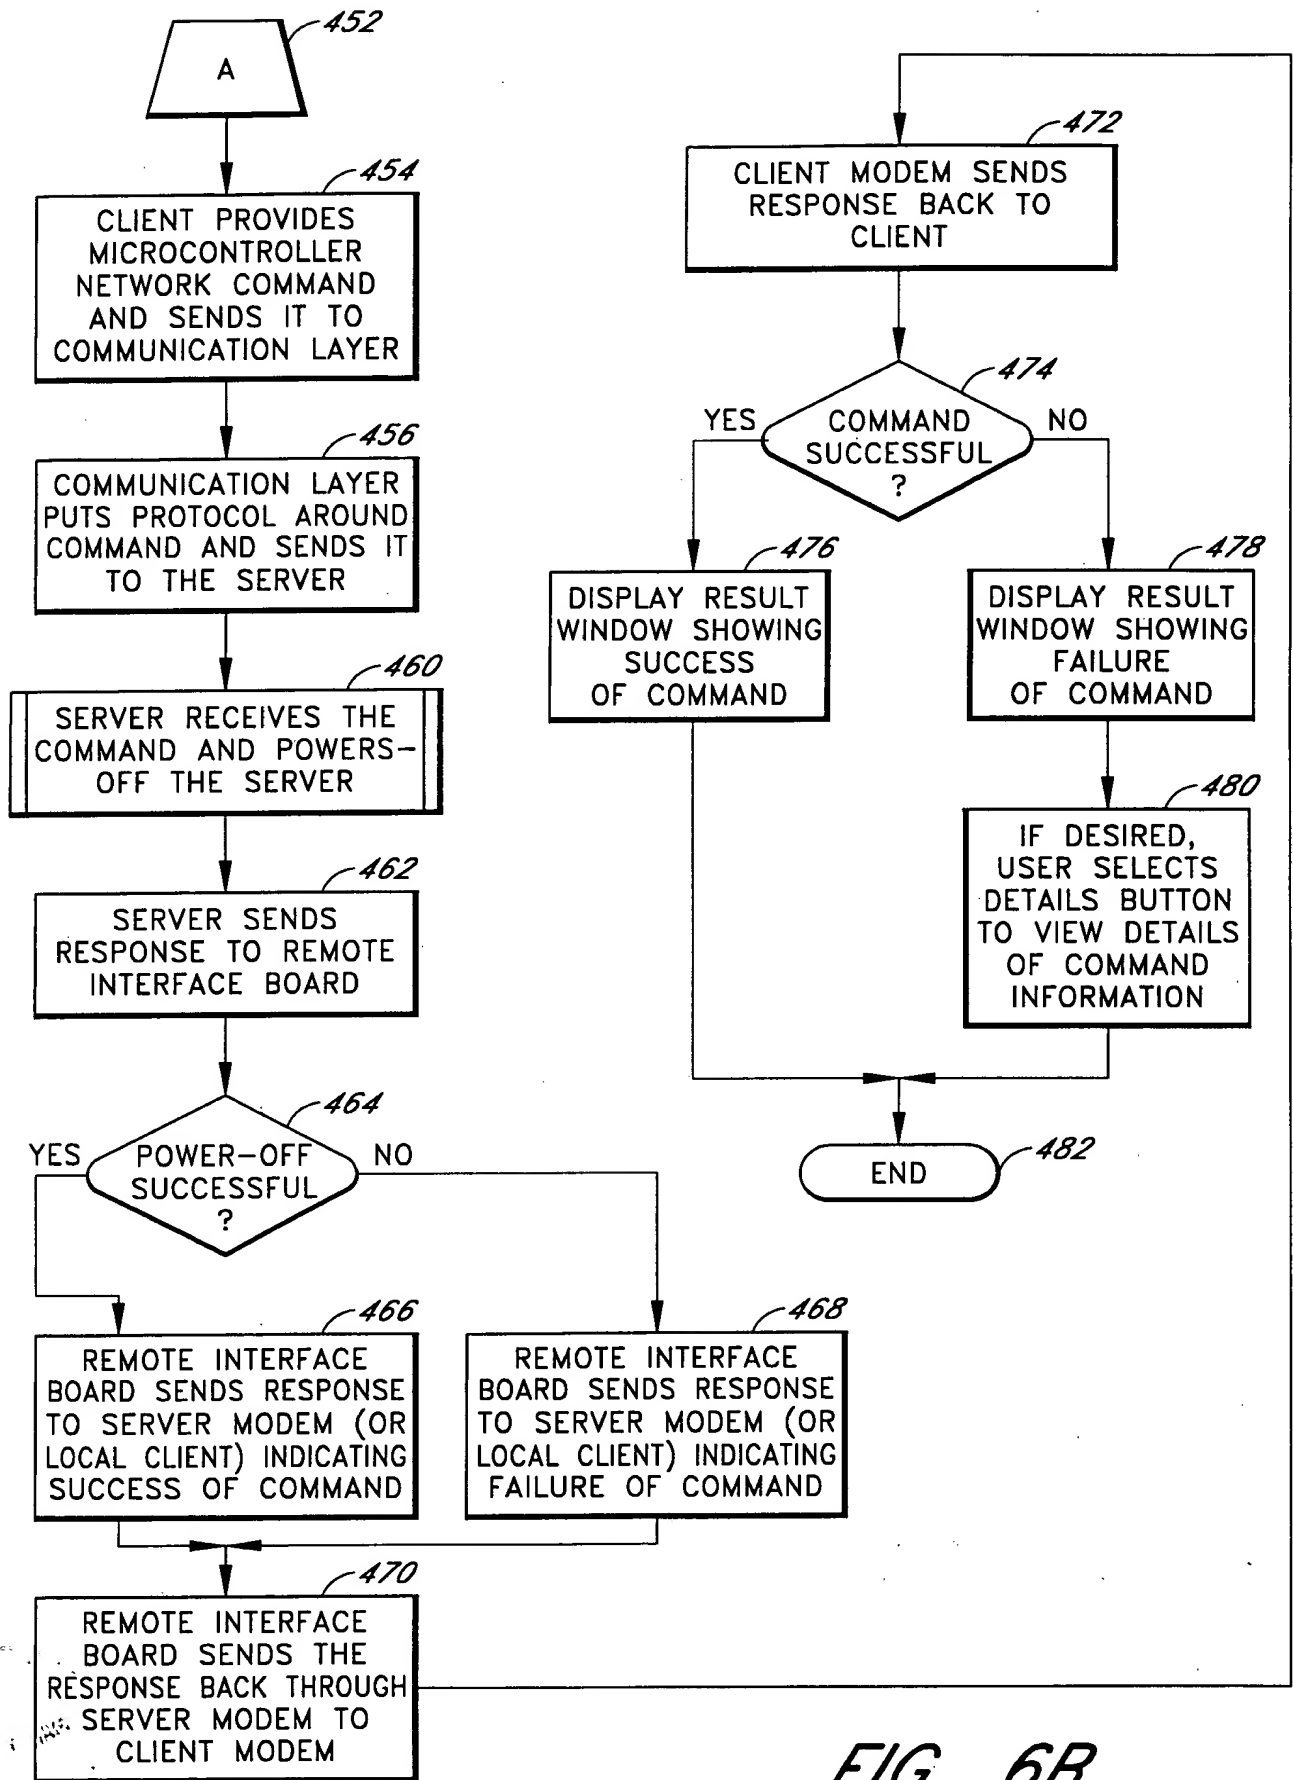


FIG. 6B

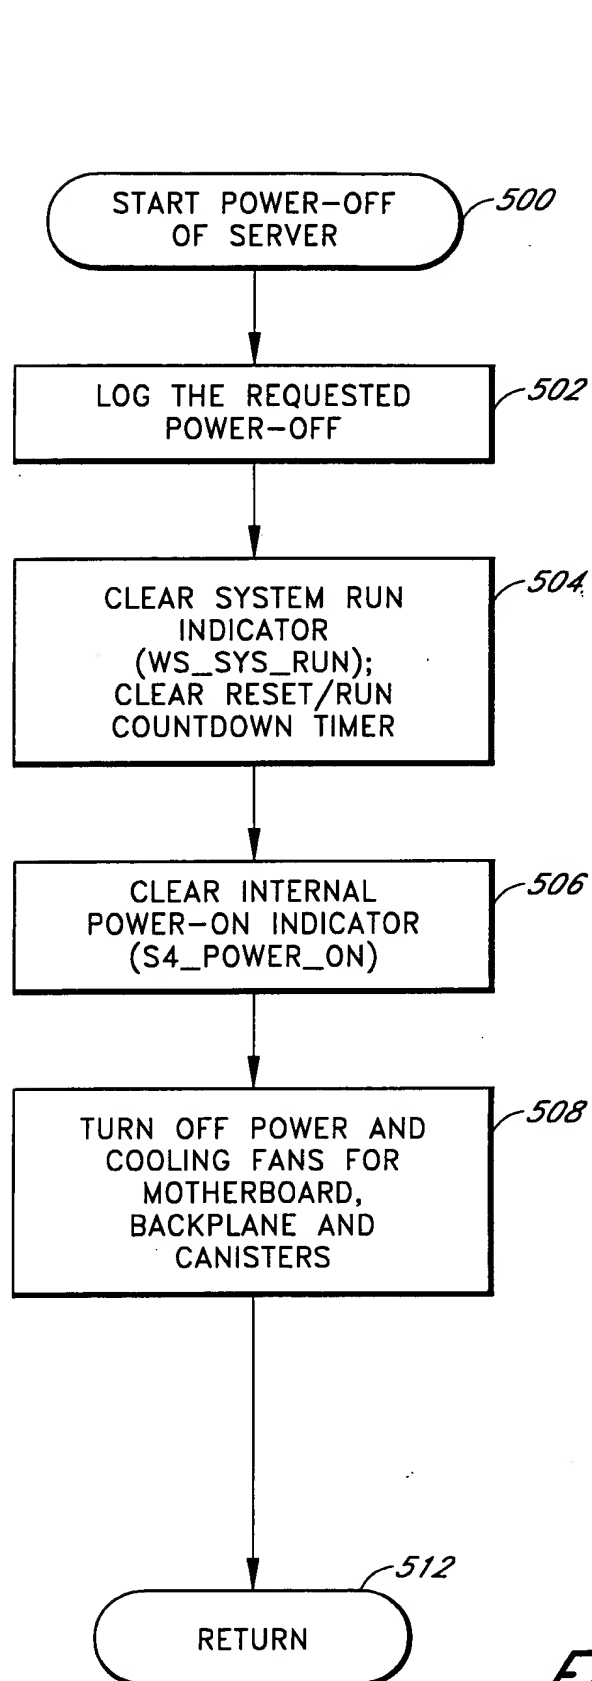
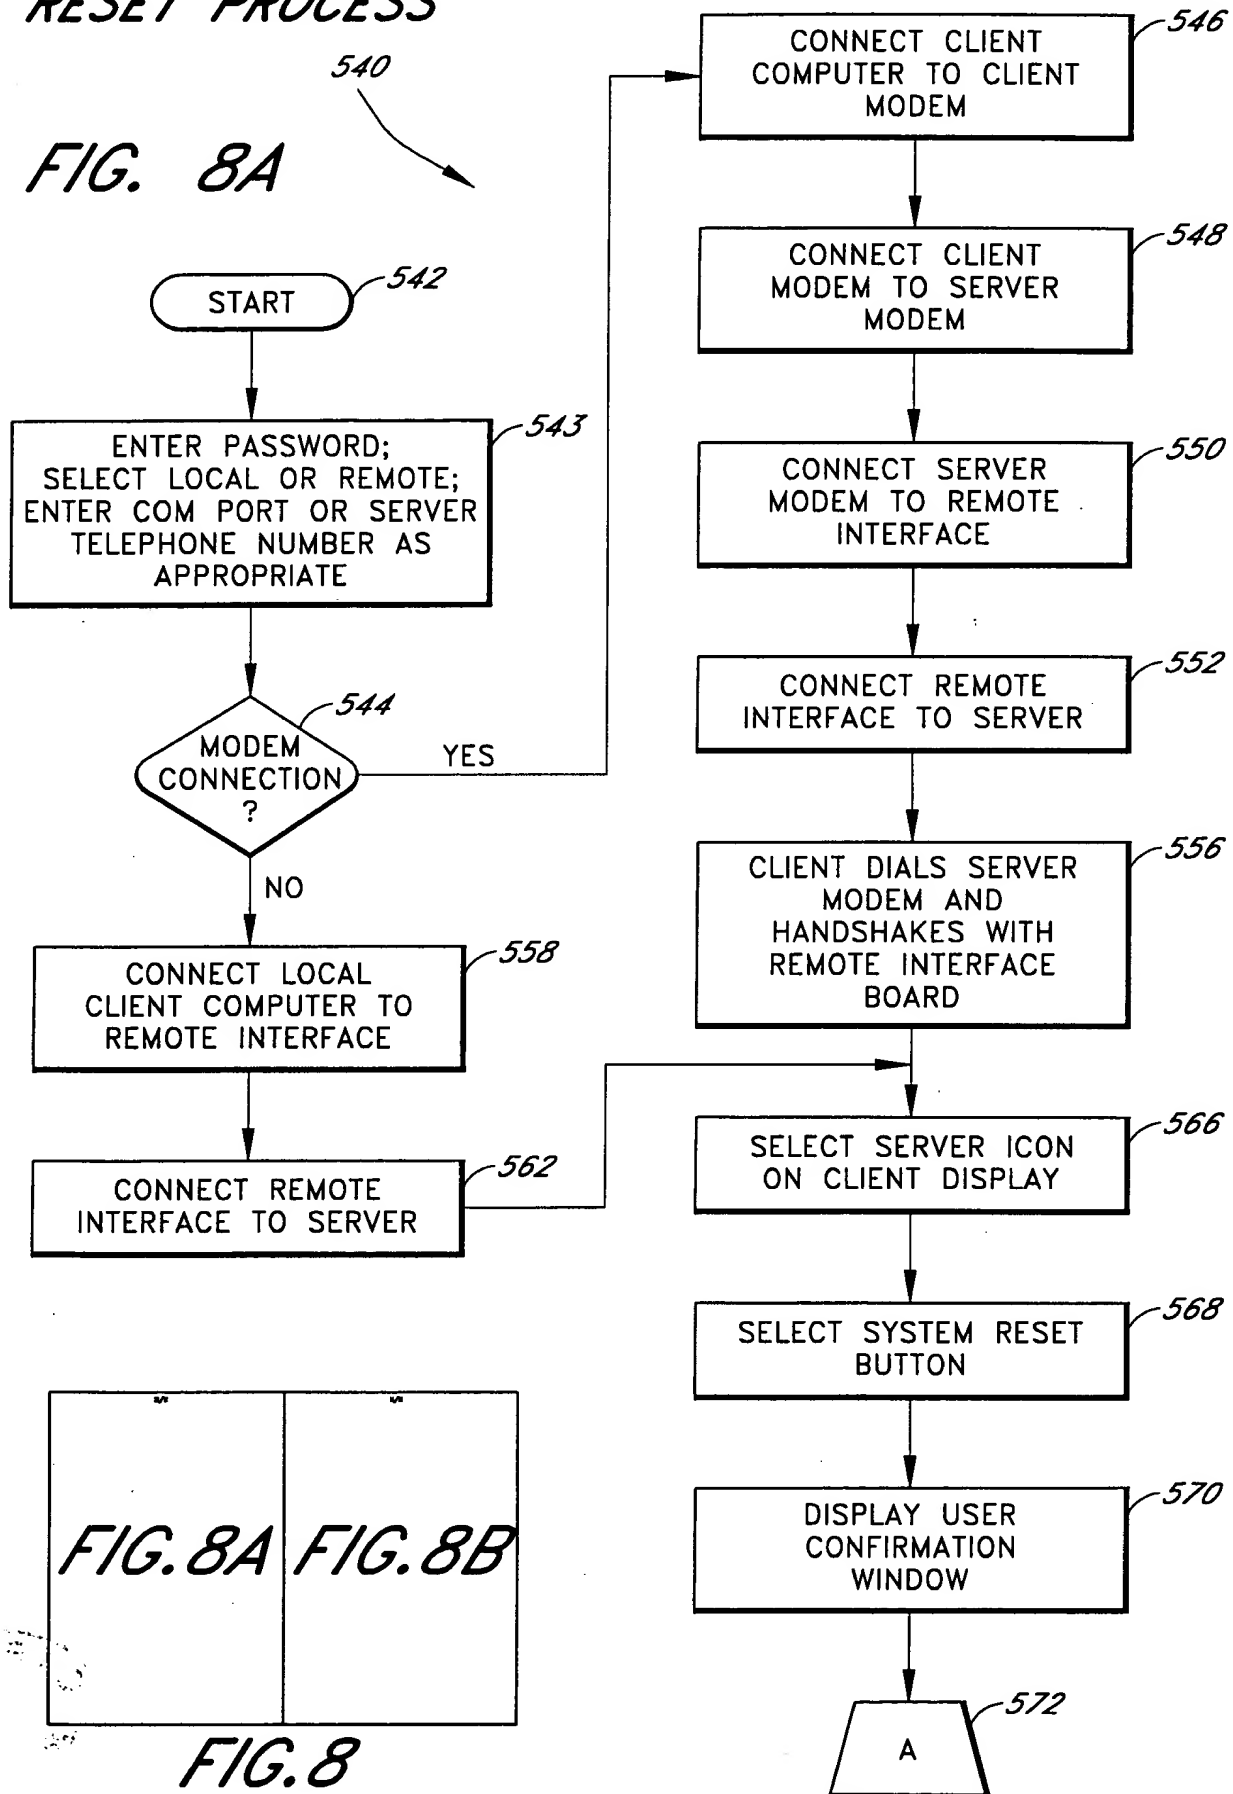


FIG. 7

RESET PROCESS

FIG. 8A



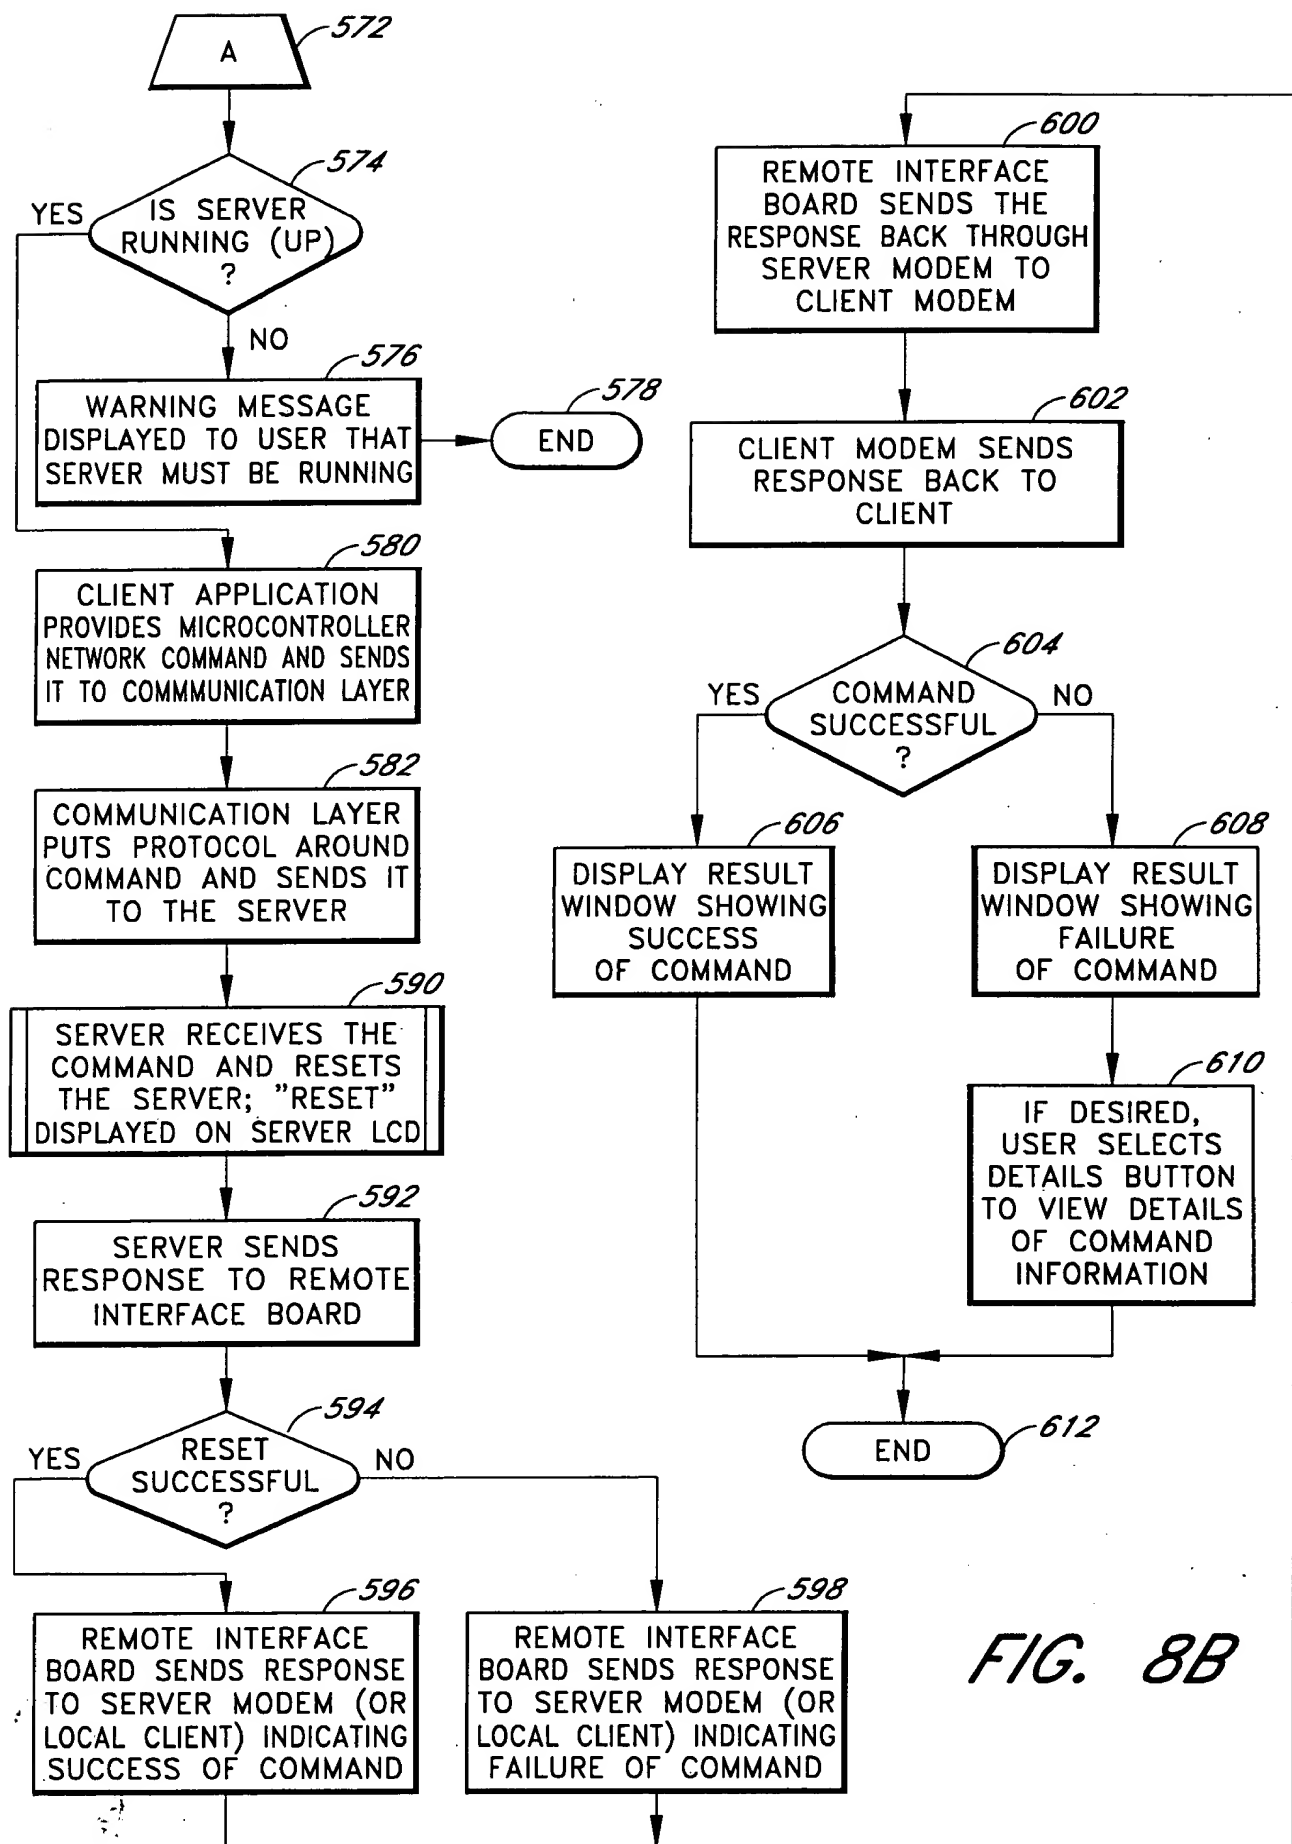


FIG. 8B


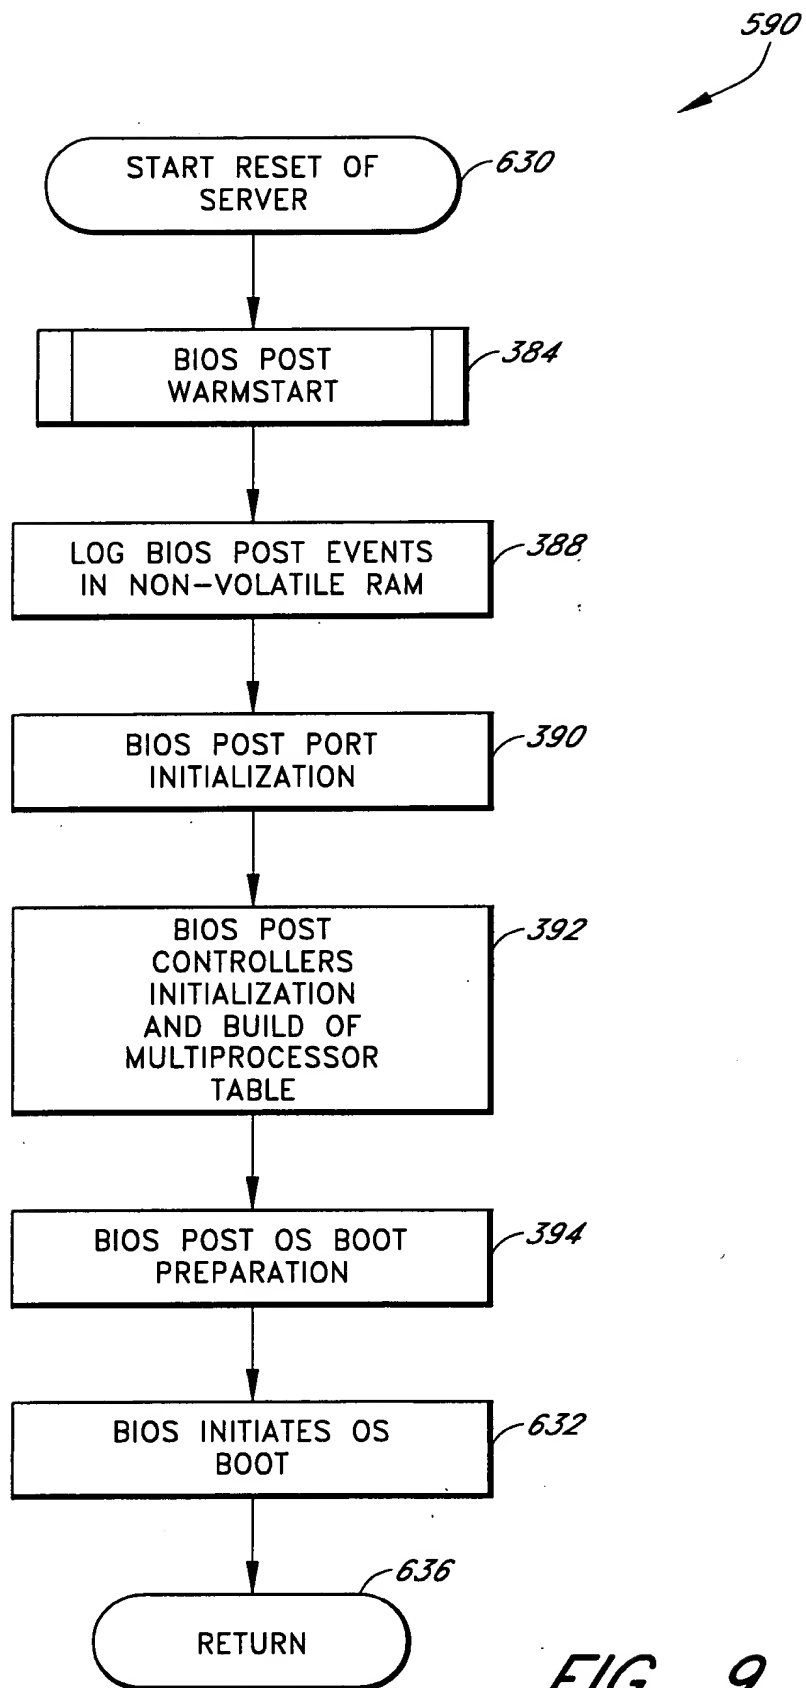


FIG. 9

DISPLAYING FLIGHT RECORDER PROCESS

670

FIG. 10A

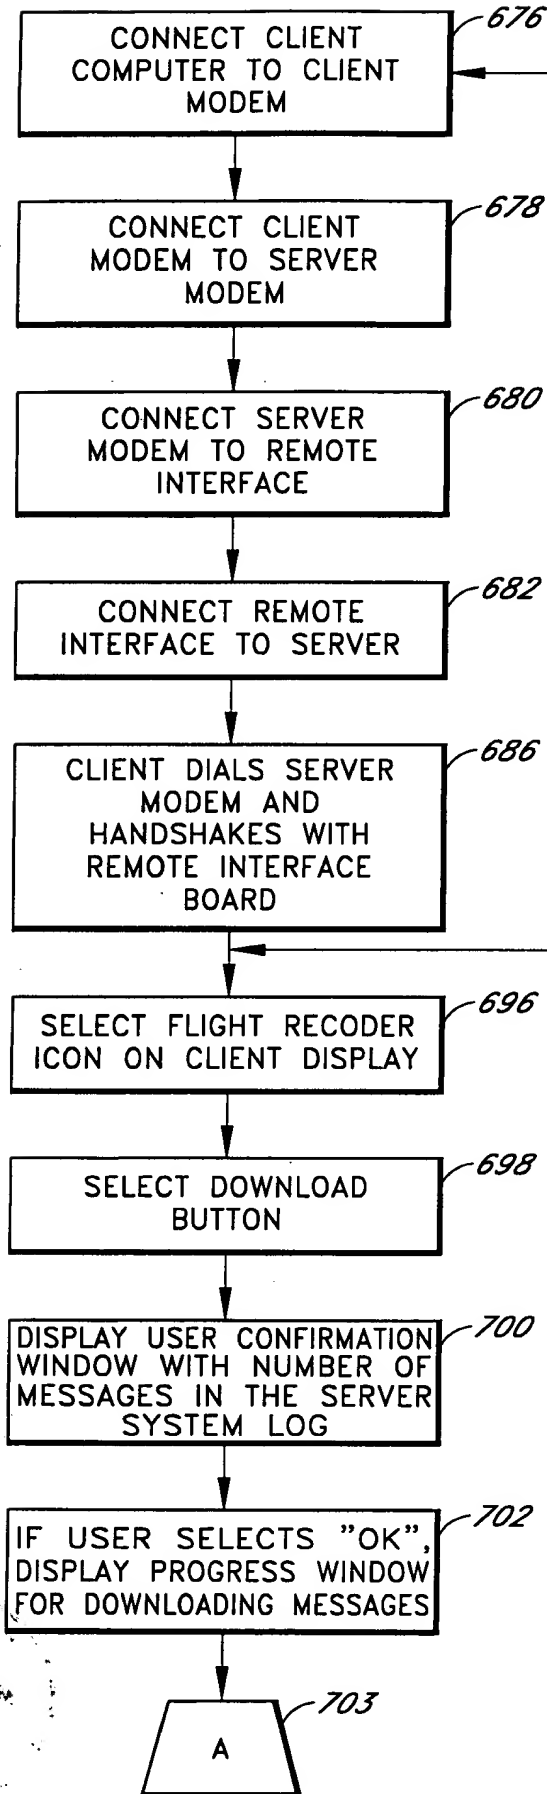

START 672

ENTER PASSWORD;
SELECT LOCAL OR REMOTE;
ENTER COM PORT OR SERVER
TELEPHONE NUMBER AS
APPROPRIATE 673

MODEM
CONNECTION
? 674

YES

NO

CONNECT LOCAL
CLIENT COMPUTER TO
REMOTE INTERFACE 688

CONNECT REMOTE
INTERFACE TO SERVER 692

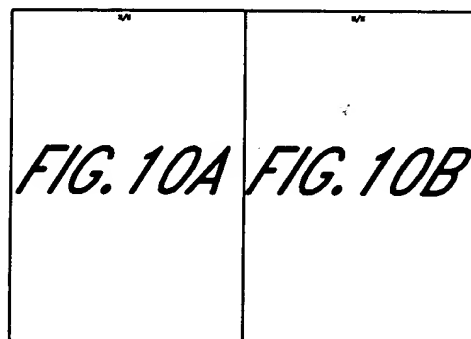


FIG. 10

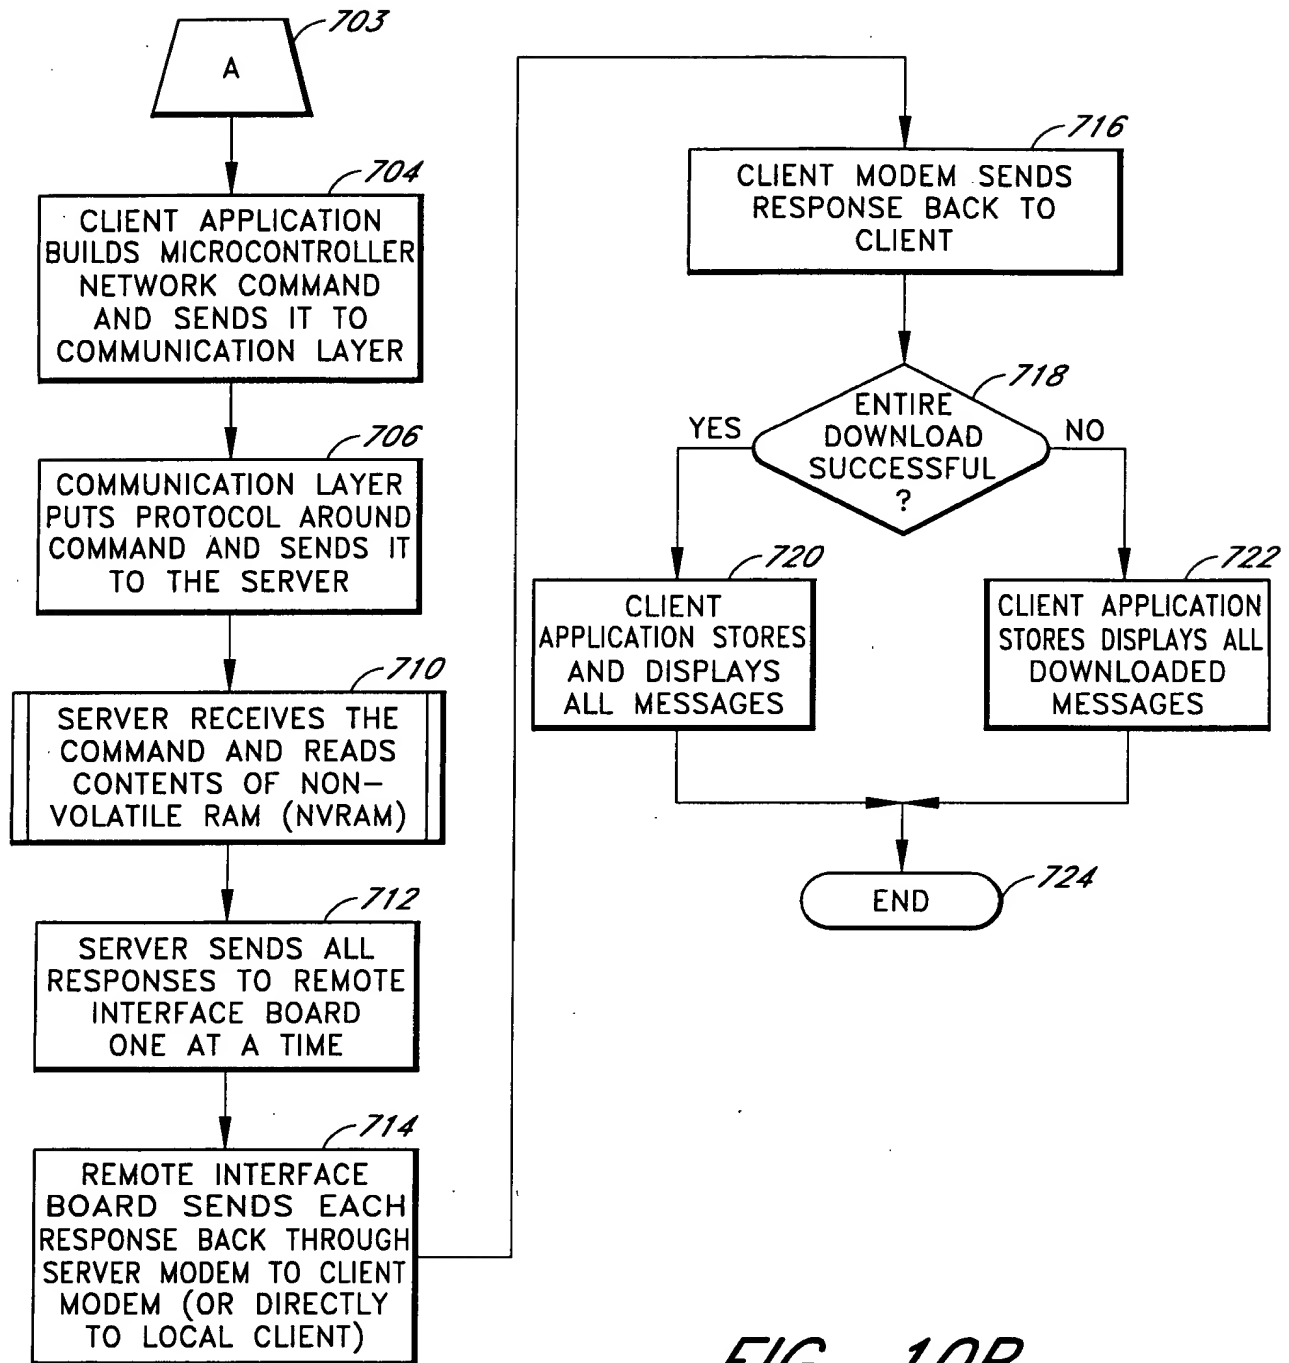


FIG. 10B

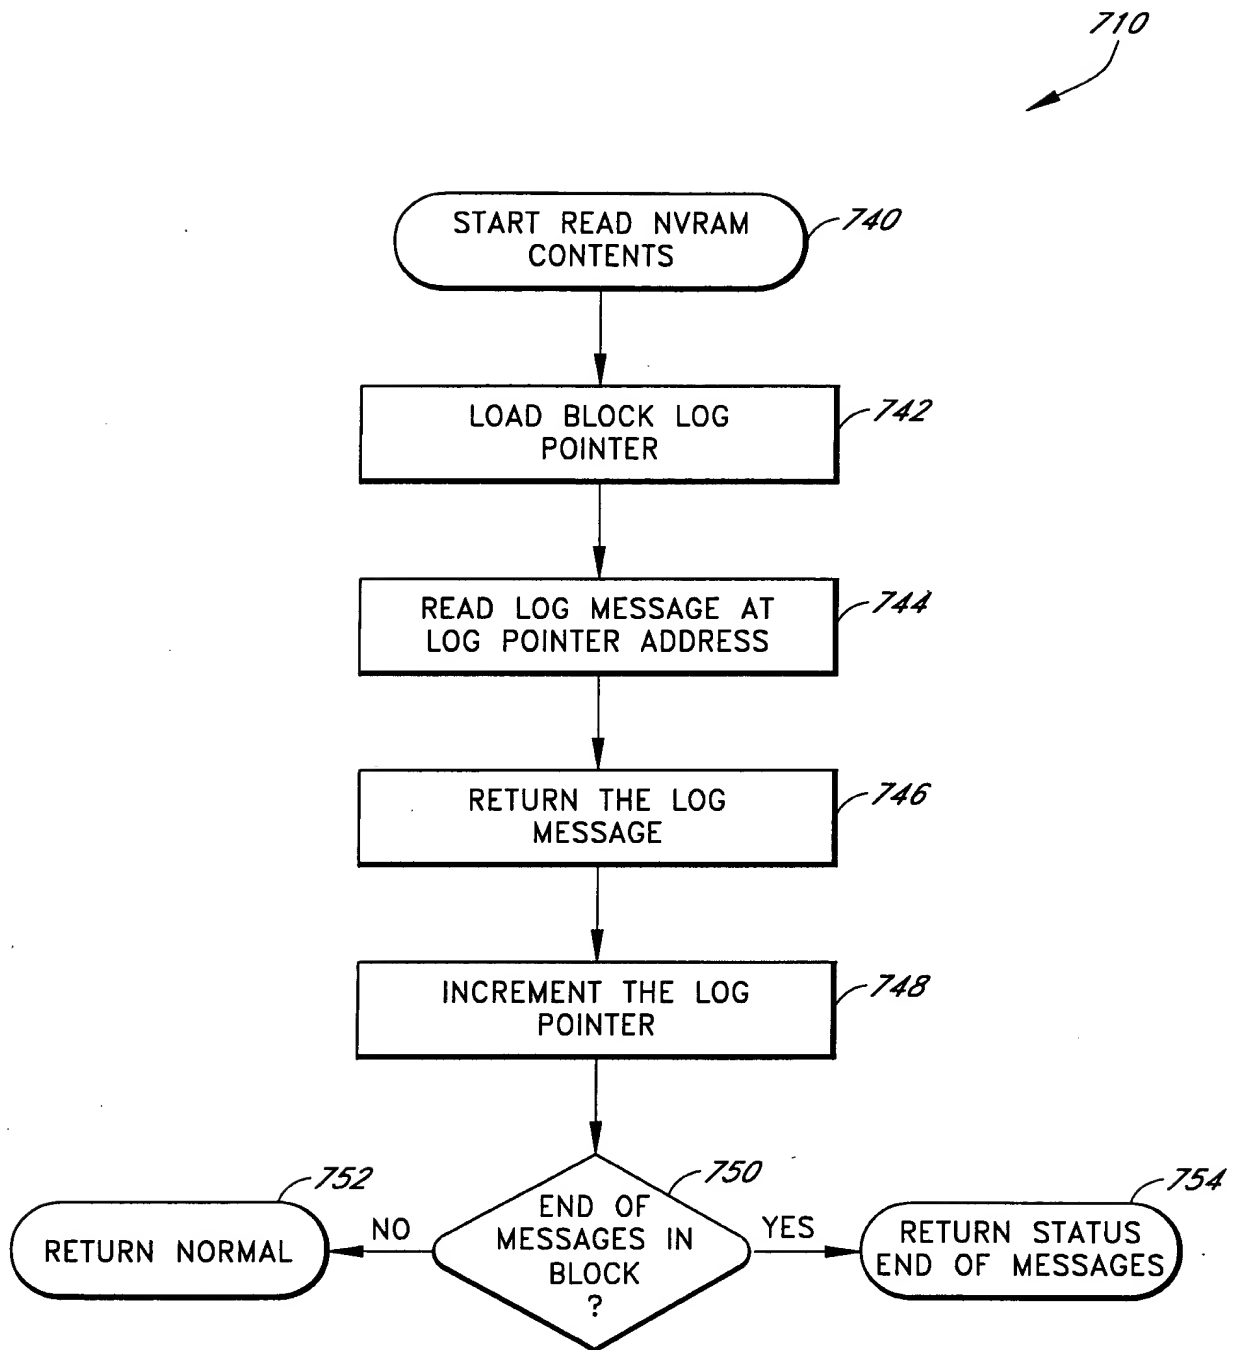
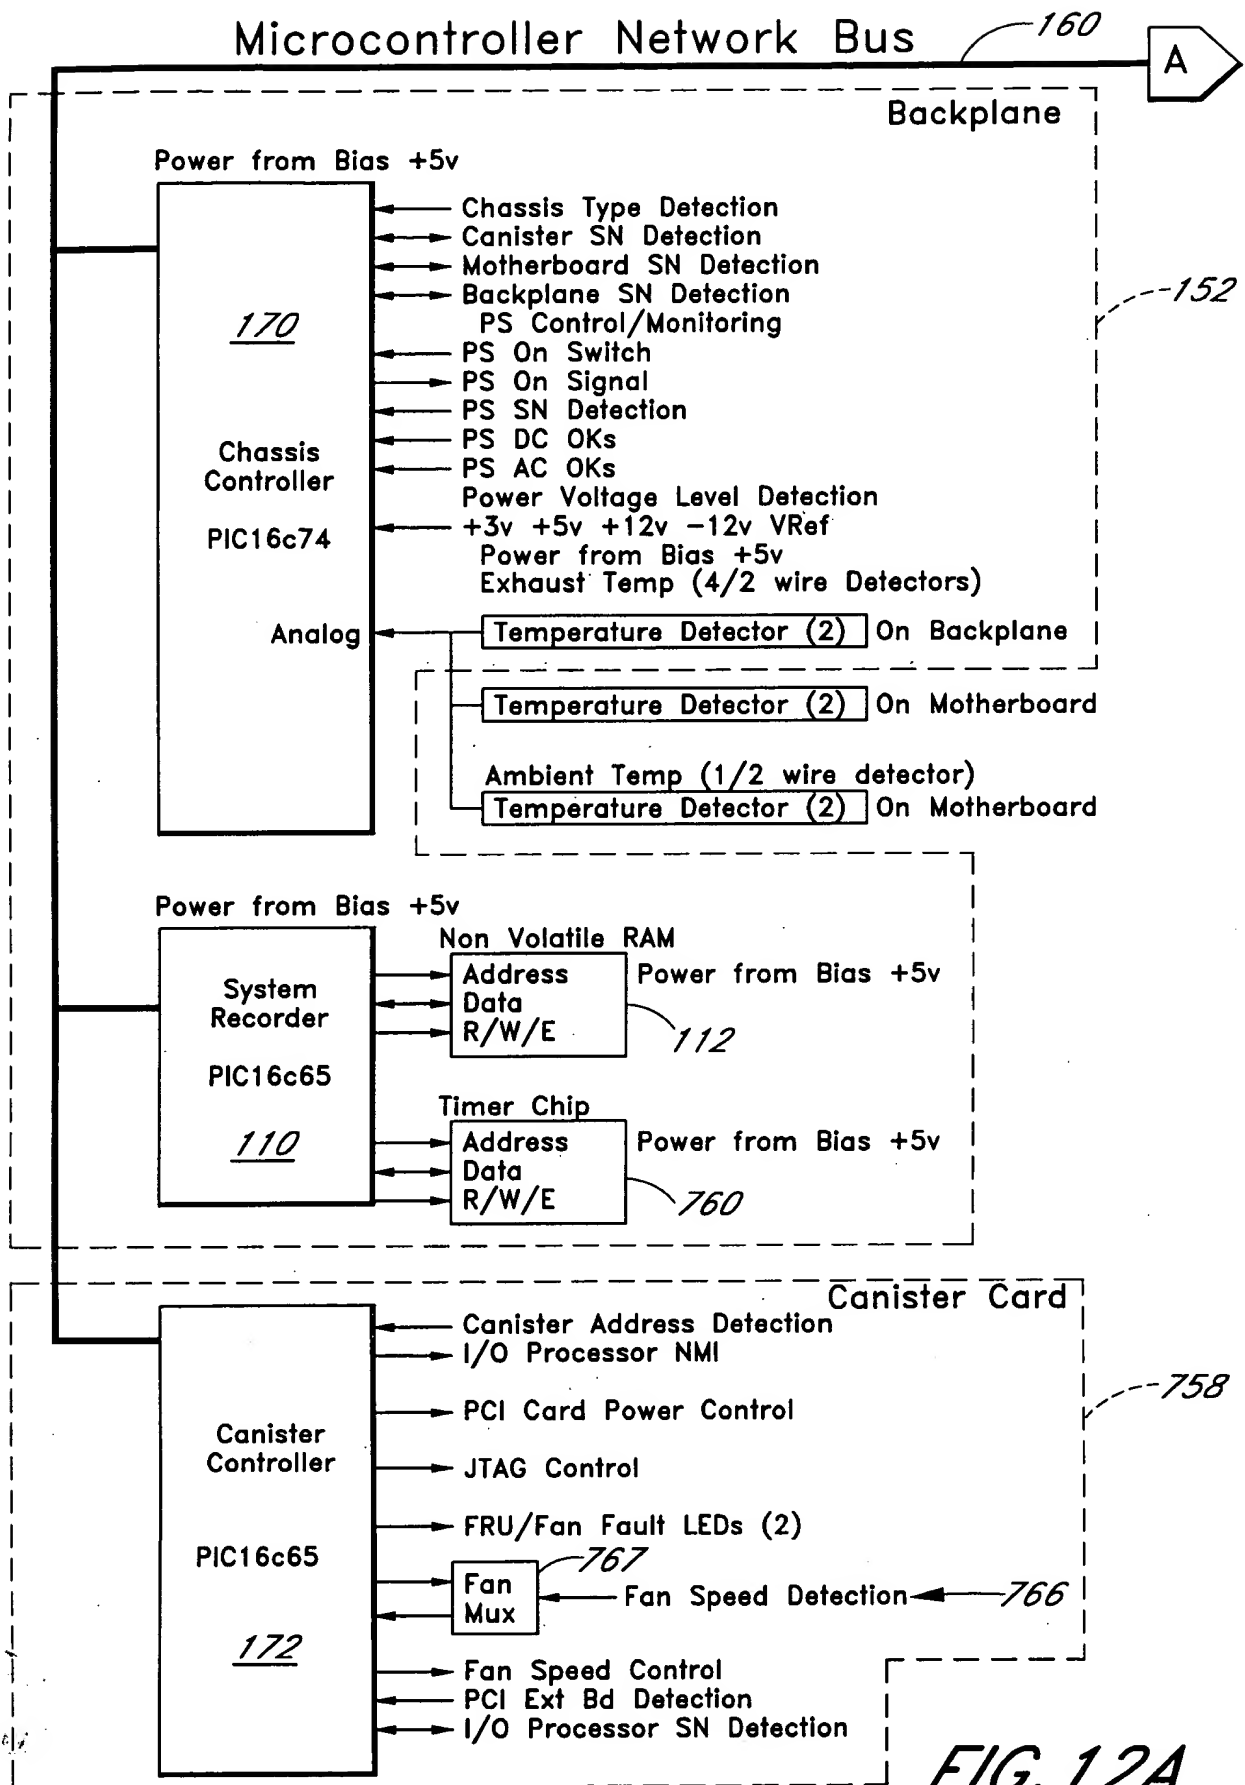


FIG. 11





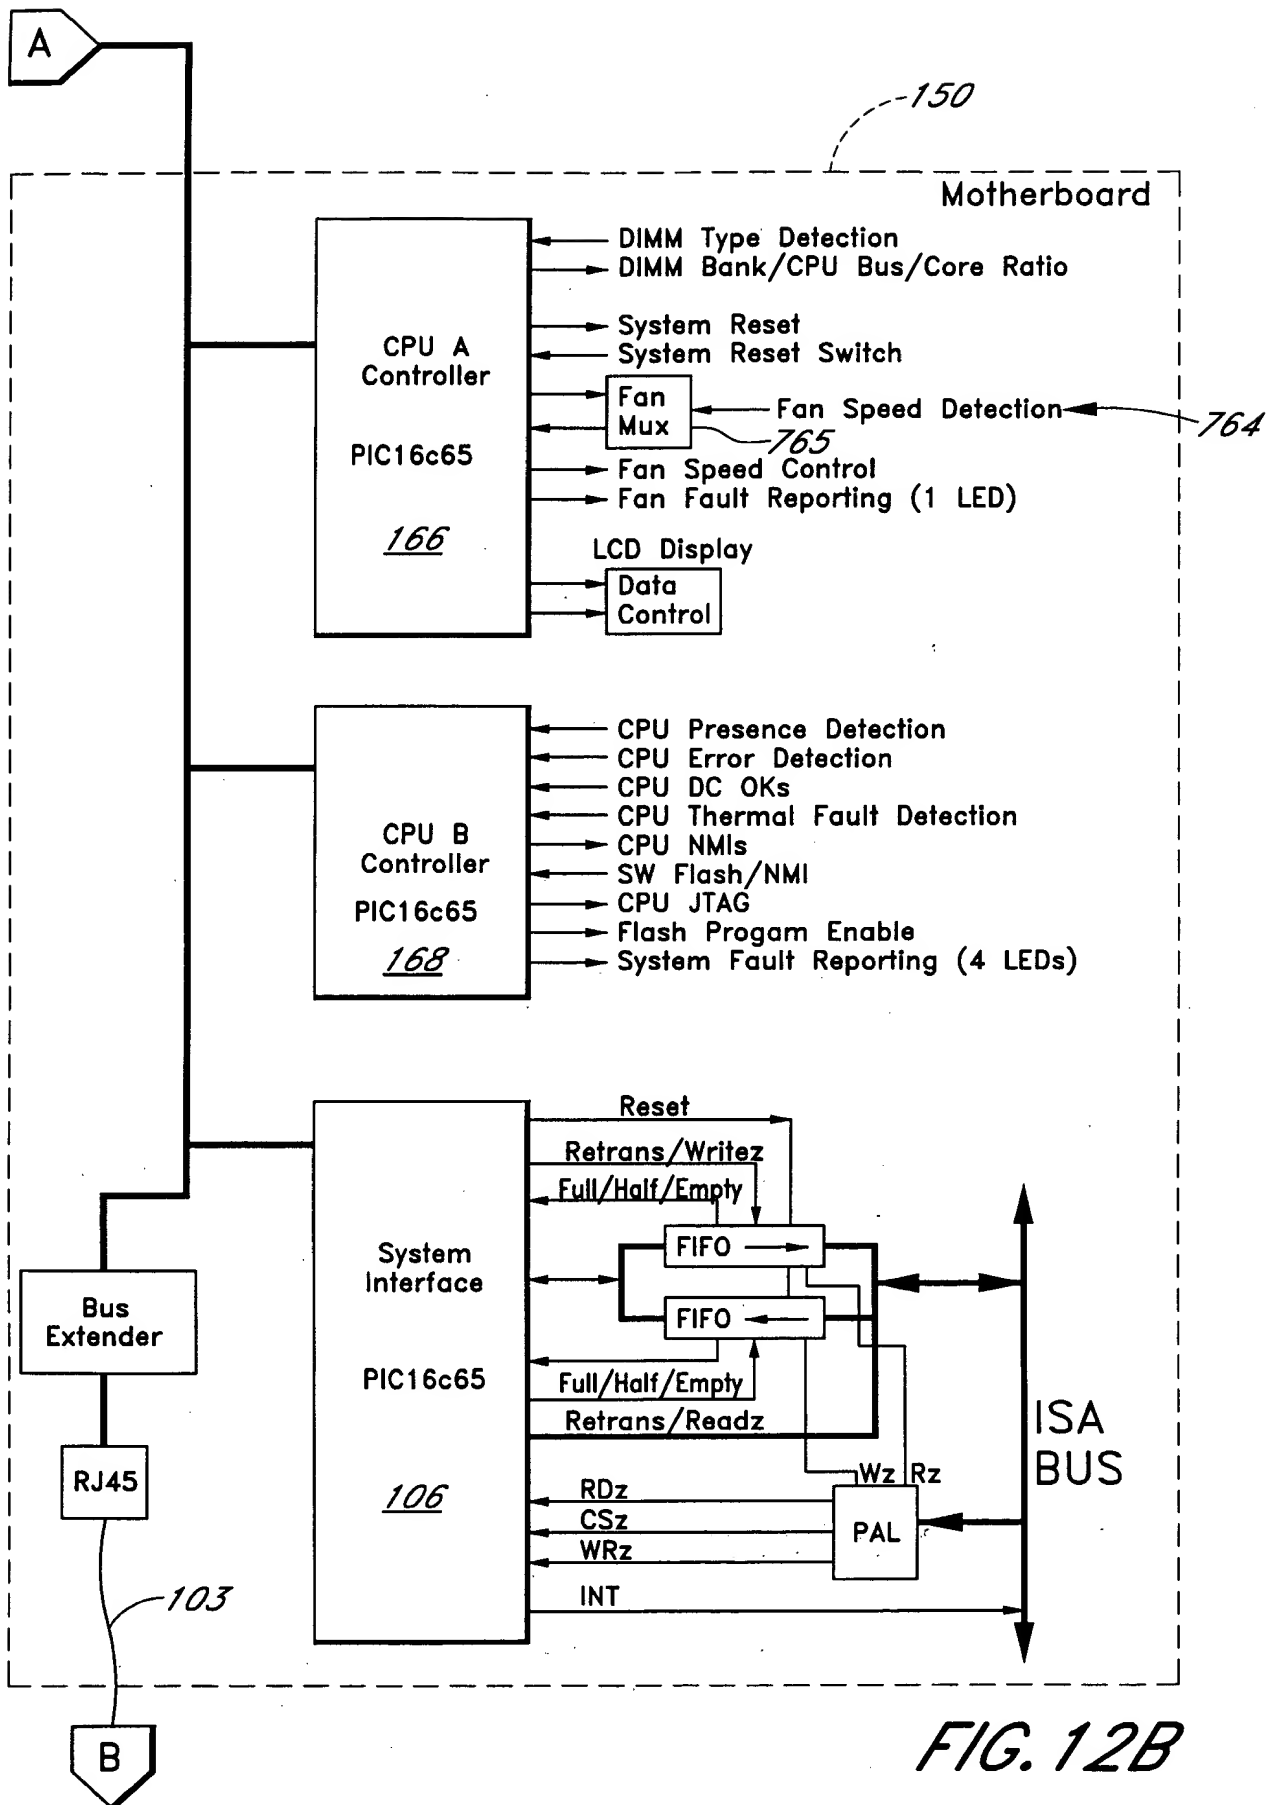


FIG. 12B

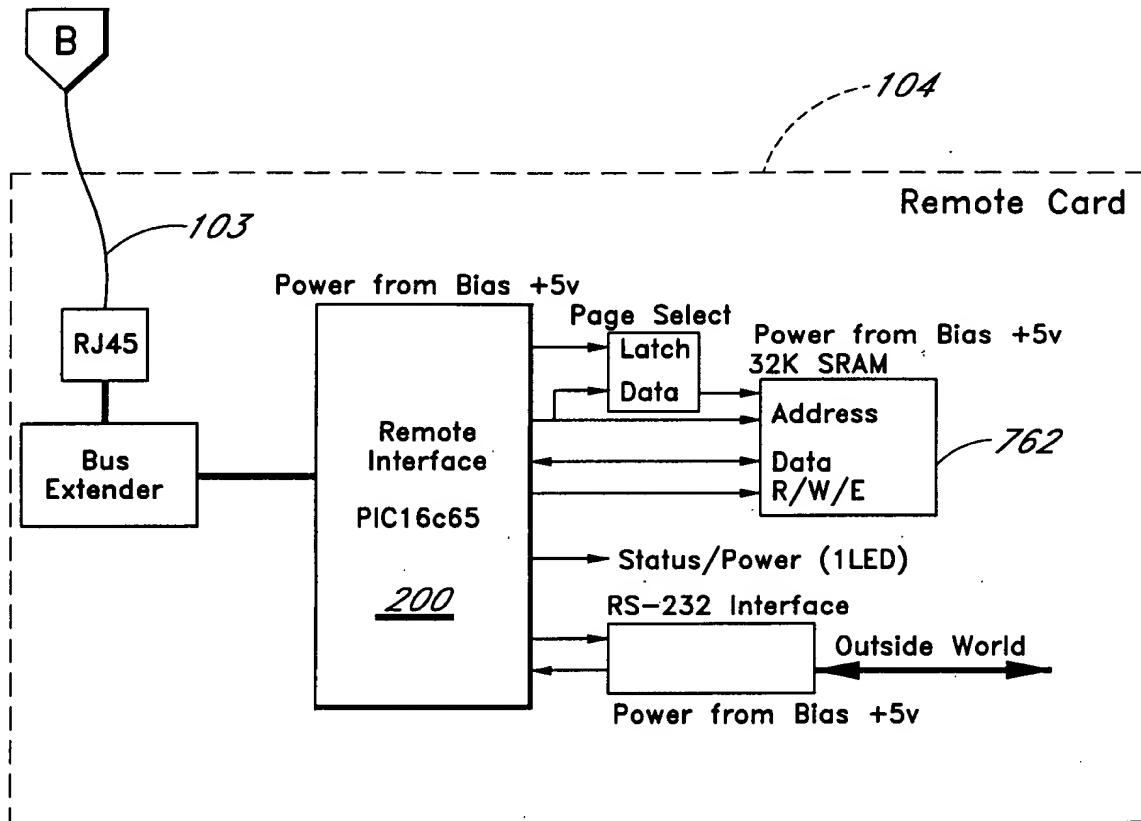
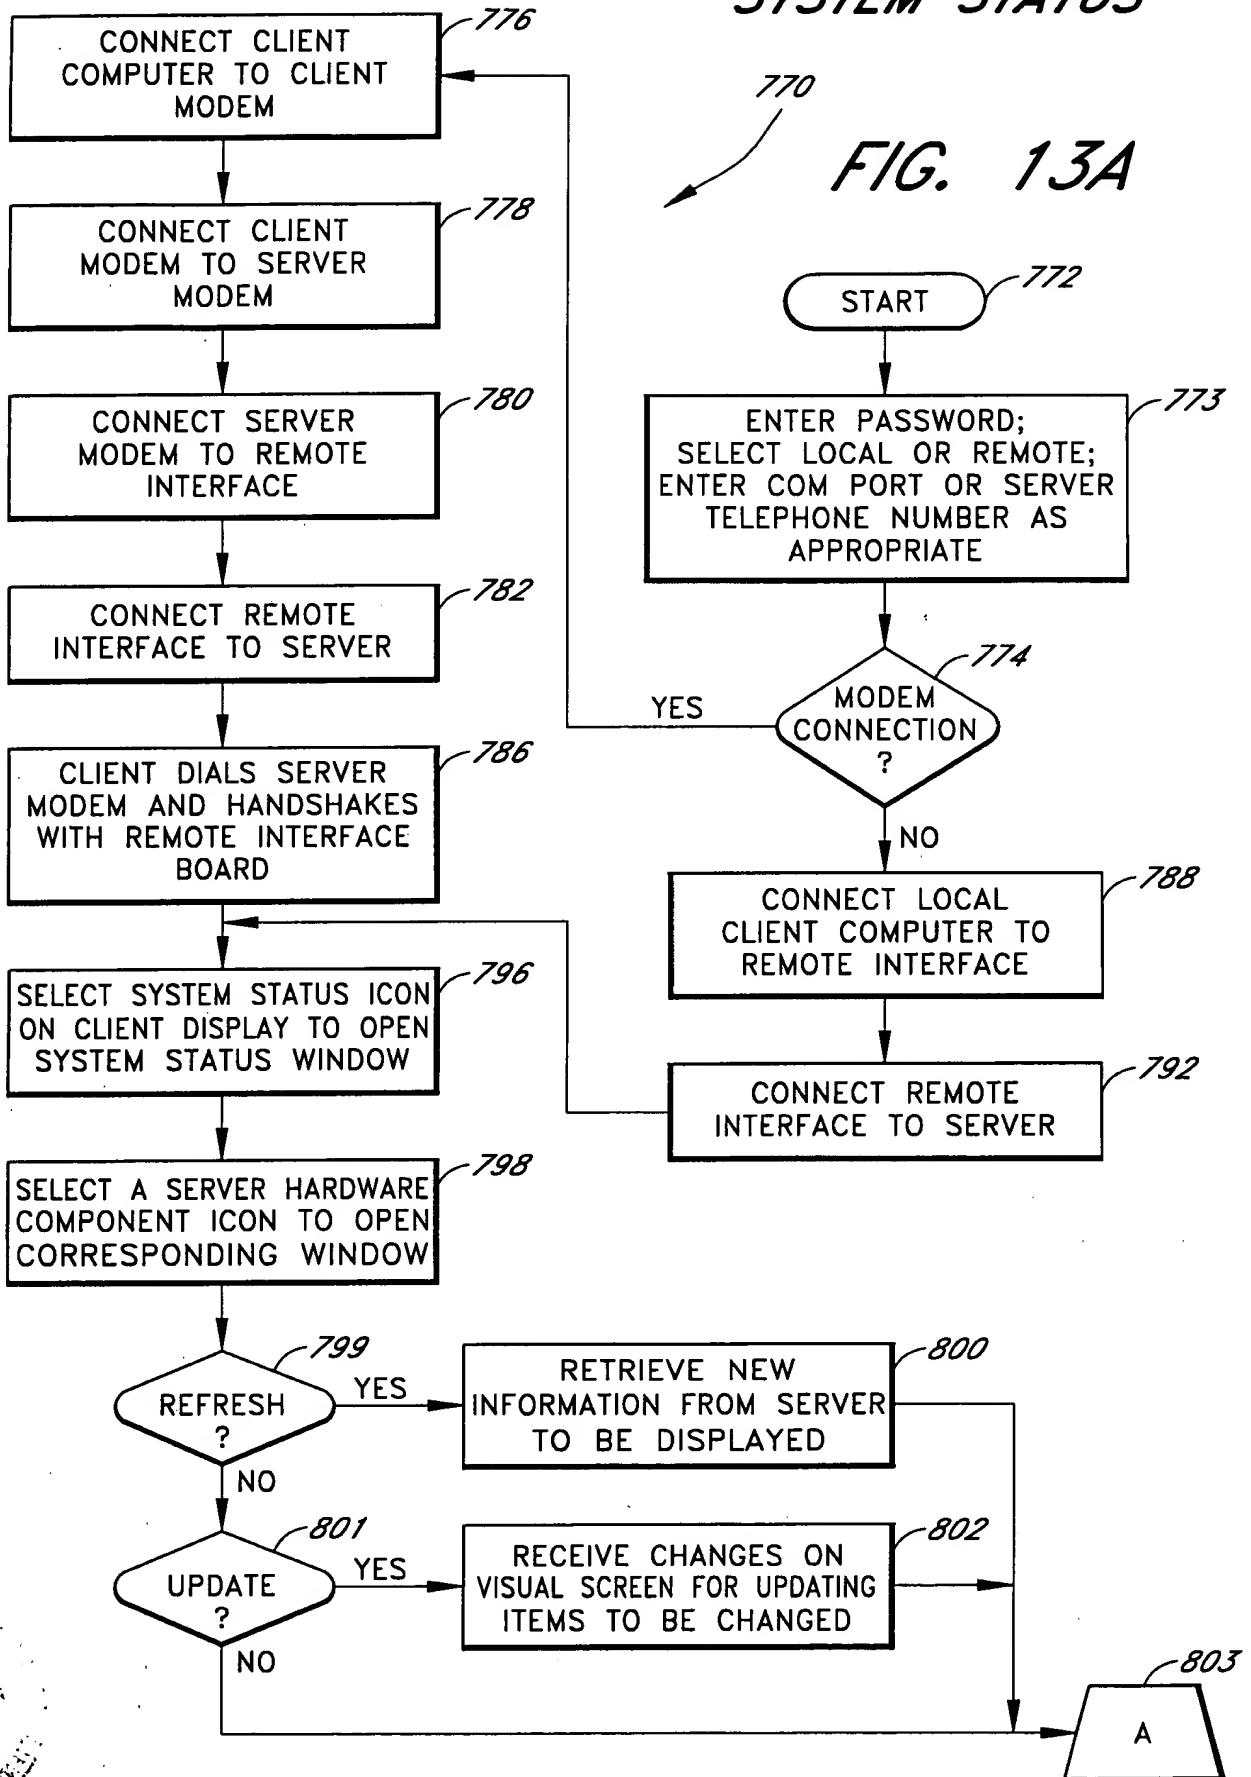


FIG. 12C

SYSTEM STATUS

FIG. 13A



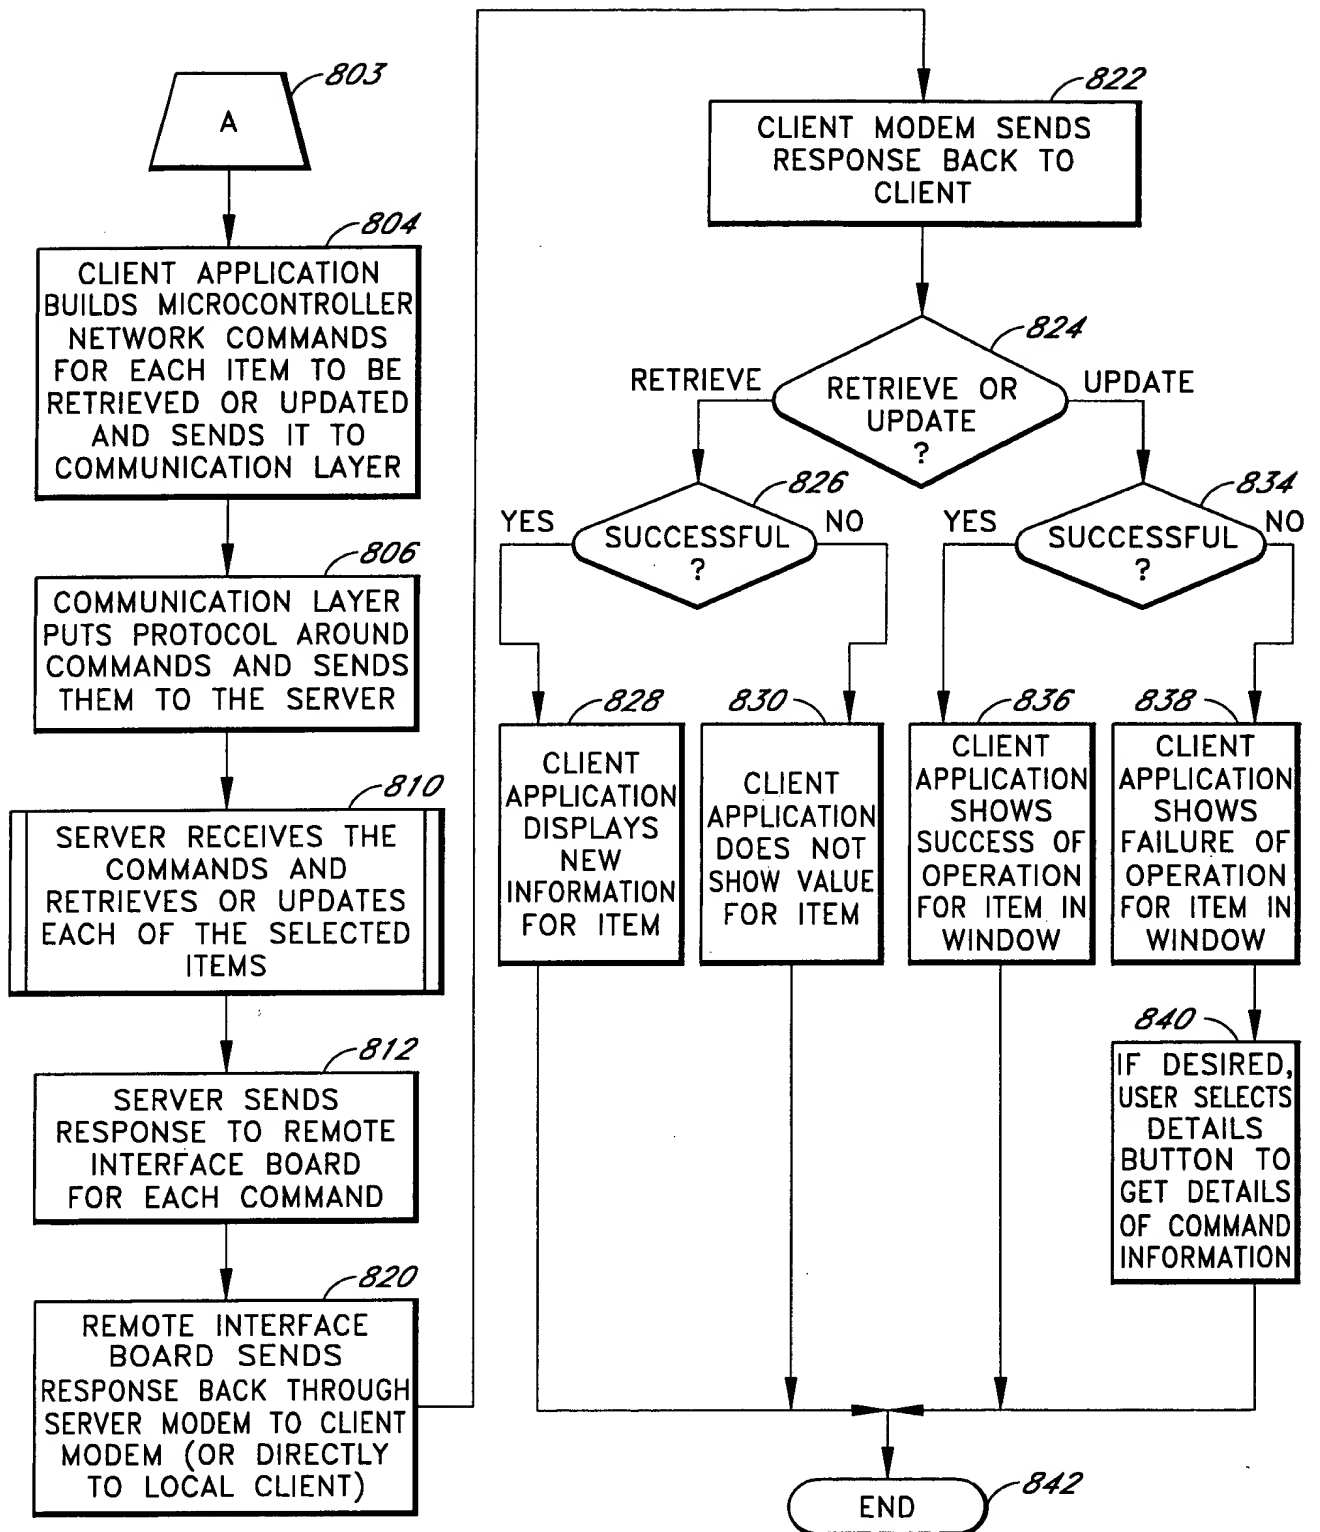


FIG. 13B

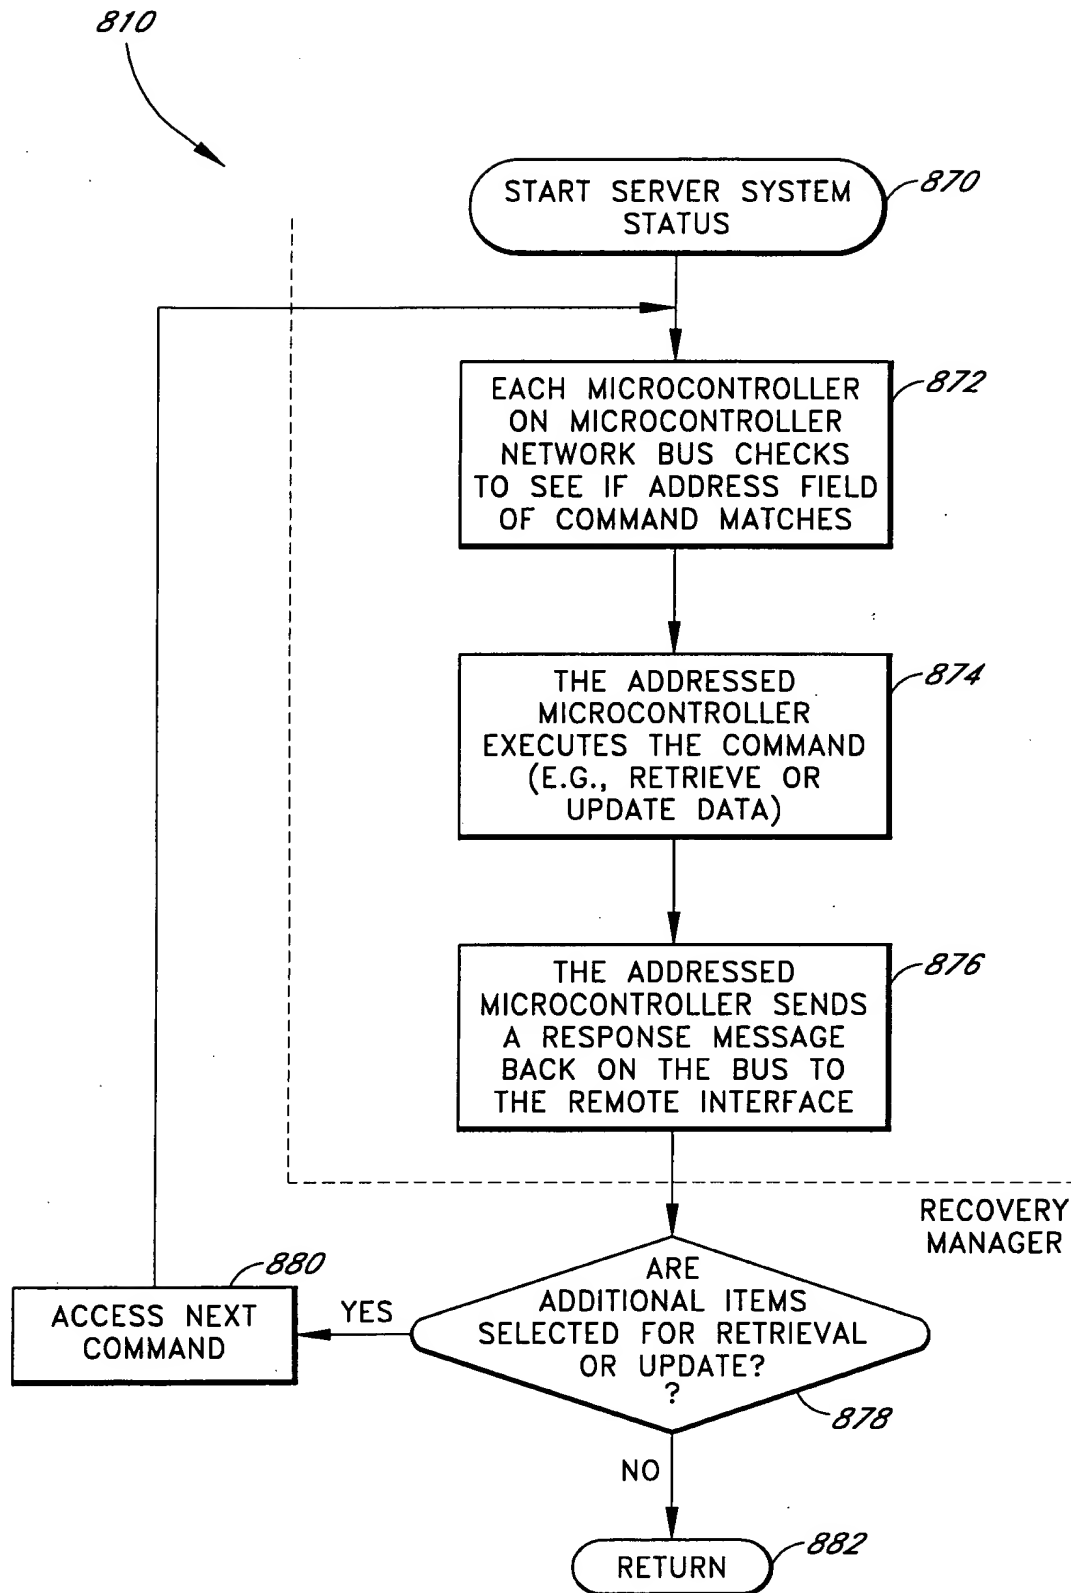


FIG. 14

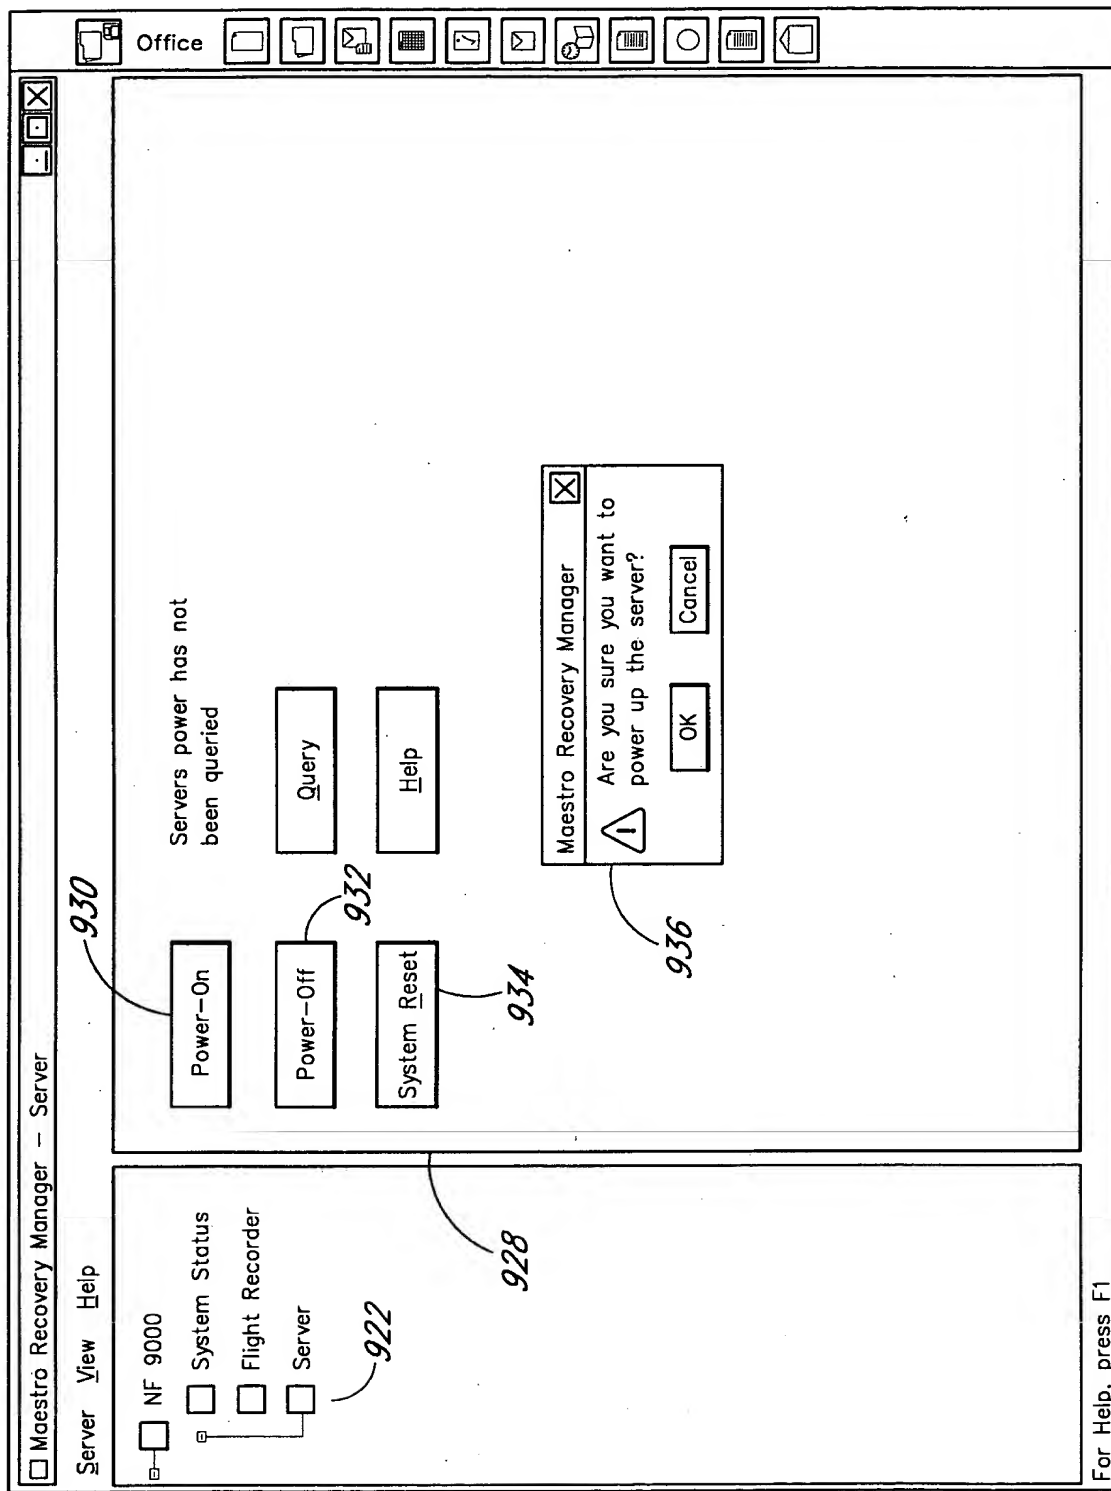


FIG. 15

☐ Maestro Recovery Manager - Flight Recorder

☐ Server
 ☐ View
 ☐ Help

☐ NF 9000

☐ System Status
 ☐ Flight Recorder
 ☐ Server

Time Stamp	Severity	Message Source	Message
1997 Aug 29 04:10:45	Error	Wire Service Internal	Ox9002
1997 Aug 29 04:10:44	Informational	Wire Service Internal	Ox6010
1997 Aug 29 04:10:28	Warning	Wire Service Internal	Ox6011
1997 Aug 29 04:07:05	Informational	BIOS	Verify Real Mode
1997 Aug 29 04:04:17	Informational	BIOS	Erase F2 key prompt

For Help, press F1

FIG. 16

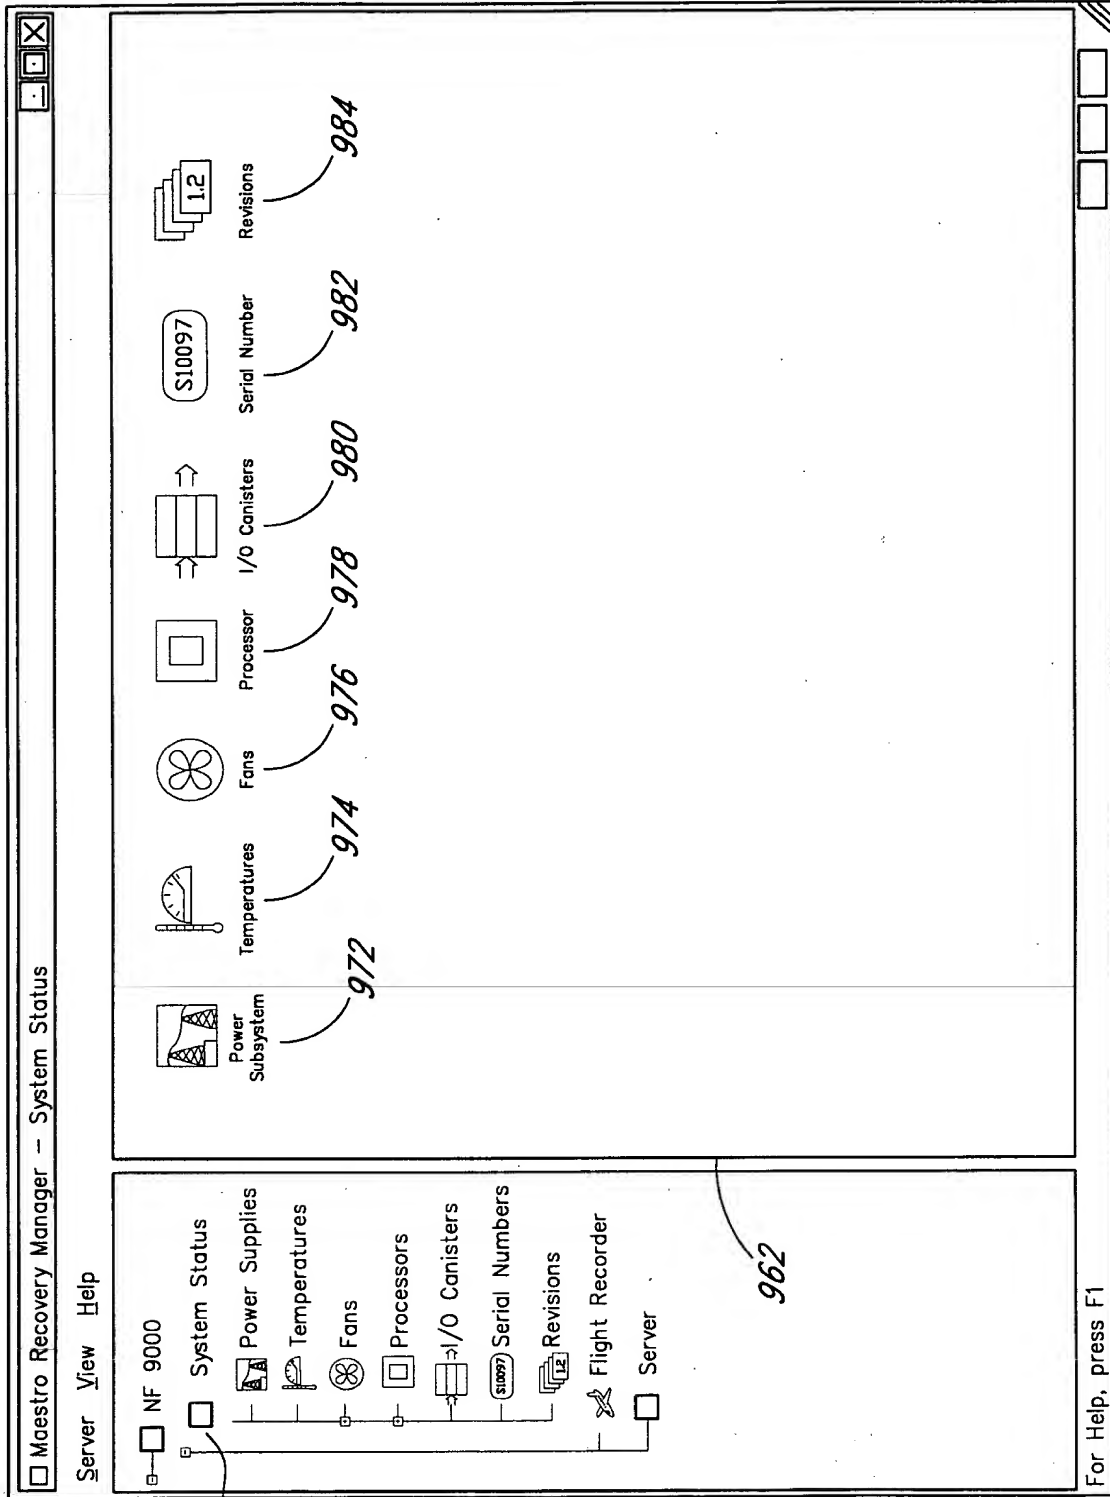


FIG. 17

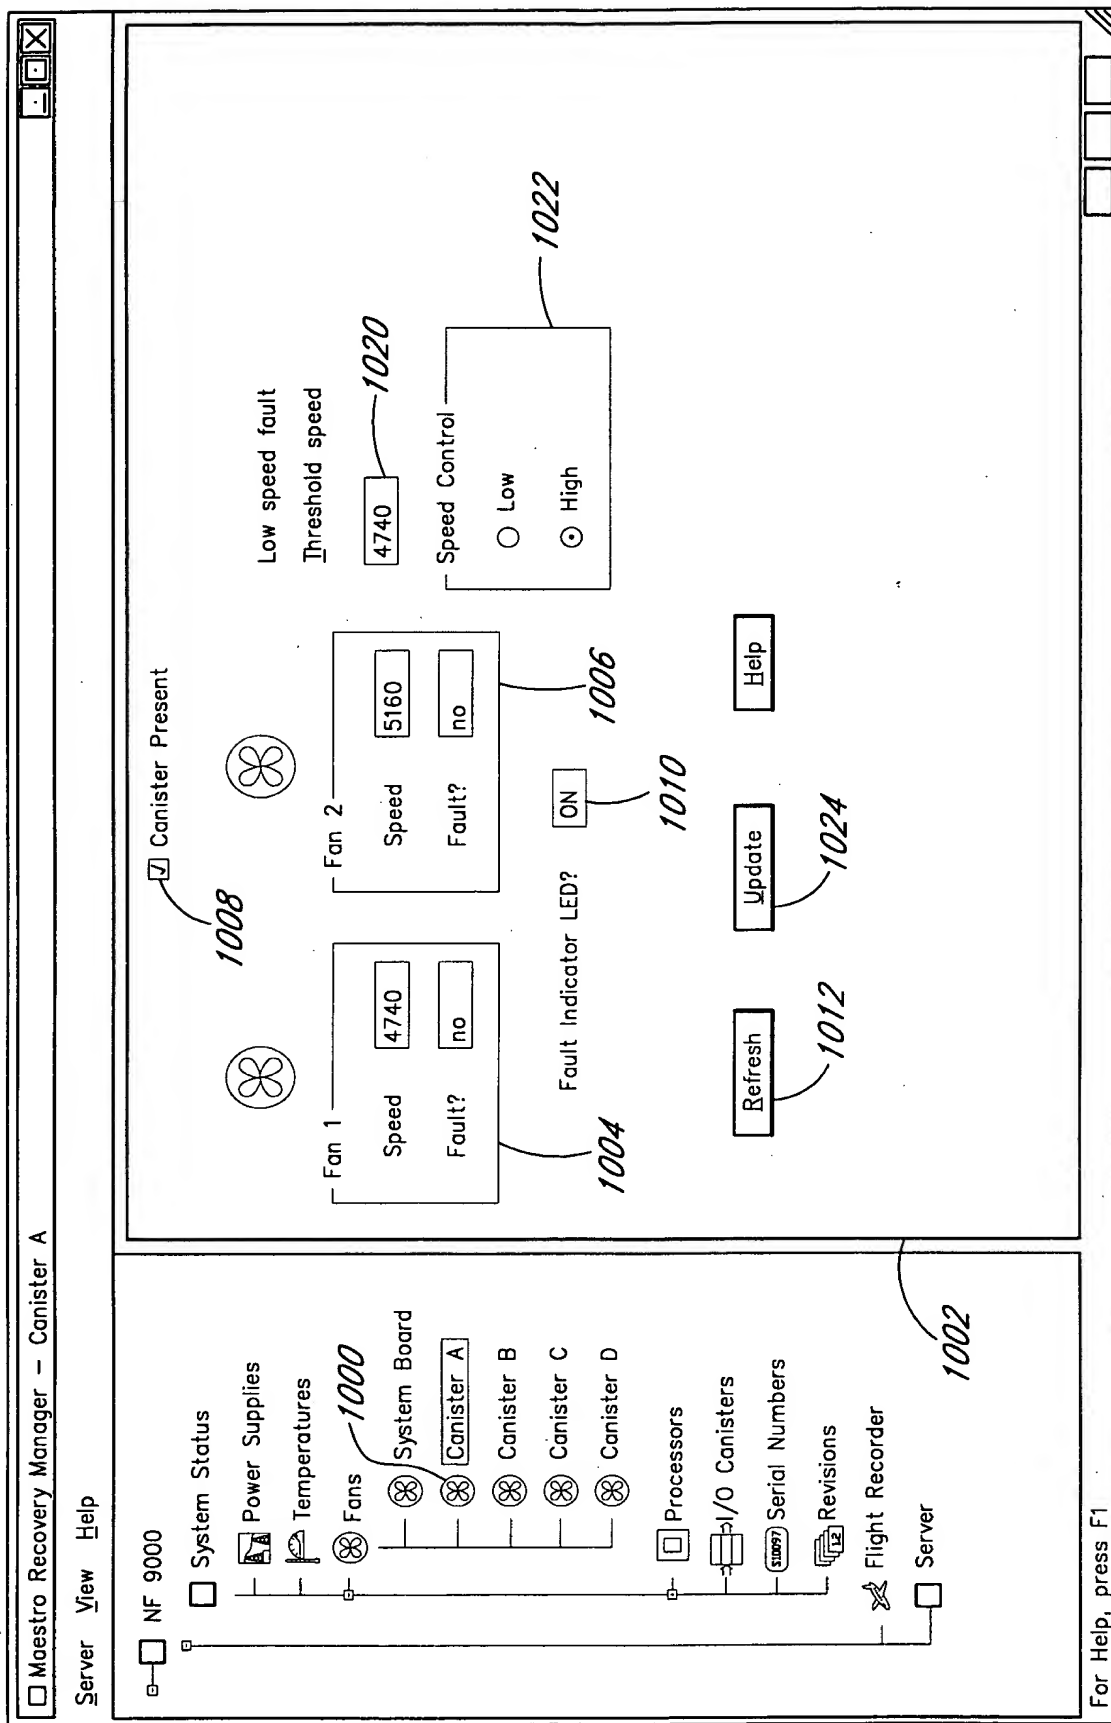


FIG. 19